

# Gigaset S675 IP

Simple  
step-by-step  
installation



**SIEMENS**

**Warning:**

Read the safety precautions and the user guide on the CD before use.

Explain their content and the potential hazards associated with using the telephone to your children.

- > Only use the power adapter supplied, as indicated on the underside of the base station or charging cradle.
- > Only use the **recommended, rechargeable batteries**, i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed, or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.
- > Insert rechargeable batteries with the correct polarity, and use them in accordance with the user guide (polarity symbols are displayed in or on the handset's battery compartment).
- > Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.
- > The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.
- > Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise, you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids.
- > Do not install the charging cradle in bathrooms or shower areas. The handset, base station and charging cradle are not splashproof.
- > The base station and charging cradle are designed for use in enclosed dry rooms within a temperature range of +41°F to +113°F.
- > Do not use your phone in environments with a potential explosion hazard, e.g., paint shops.
- > Never expose the telephone to any of the following: heat sources, direct sunlight or other electrical appliances.
- > Protect your Gigaset from moisture, dust, corrosive liquids, and vapors.
- > If you give your Gigaset to someone else, make sure you also give them the user guide.
- > Please remove faulty base stations from use or have them repaired by our Service Center, as they could interfere with other wireless services.
- > All electrical and electronic equipment should be disposed of separately from general household waste, using the sites designated by local authorities.
- > Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
- > Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
- > This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
- > To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
- > Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrester.
- > Do not use the telephone to report a gas leak in the vicinity of the leak.

**Warning:**


When the keypad lock is active, you cannot call emergency numbers.

**Power Outage:**

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

VoIP service may not work during a power outage, or when the Internet connection fails or becomes overloaded.

If your power is out or your Internet connection is down, be aware that your VoIP service may not work. Consider installing a backup power supply, maintaining a traditional phone line, or having a wireless phone as a backup.

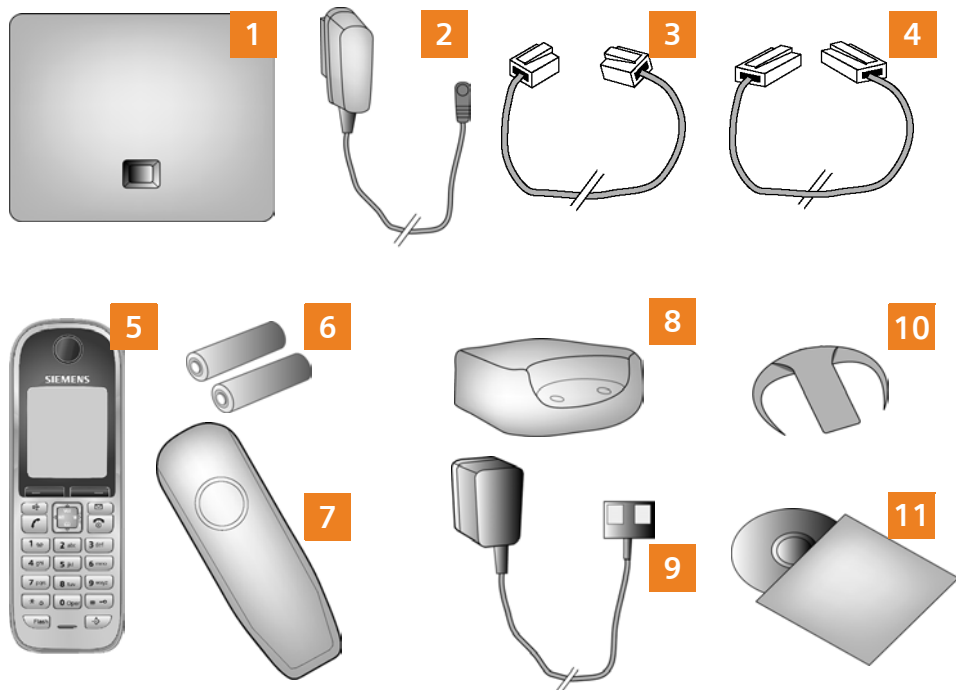

- 1 Gigaset S675 IP **base station**
- 2 Power adapter for connecting the base station to a power outlet
- 3 Phone cord for connecting the base station to the fixed-line telephone network
- 4 Ethernet (LAN) cable for connecting the base station to a router (LAN/Internet)
- 5 Gigaset S67H **handset**
- 6 Two batteries for the handset (uncharged)
- 7 Battery compartment cover for the handset
- 8 Handset **charging cradle**
- 9 Power adapter for connecting the charging cradle to a power outlet
- 10 Belt clip for the handset
- 11 CD with the **user guide** for your Gigaset.

If the firmware for your base station is updated, the user guide will also be updated and made available for download on the Internet at [www.gigaset.com](http://www.gigaset.com).



**Display keys:**

Start a function that is displayed on the left or right of the bottom display line



**Handsfree key:**

Switch between earpiece and handsfree mode (key lights up)



**Talk key:**

Answering a call  
After entering number: start dialing via VoIP/fixed line network (press and hold/press briefly)



**Control key:** Open menu (press right); open directory (press down arrow); open list of online directories (press and hold down arrow); scroll through menus (press up/down); navigate in text



**Message key:**

Open call and message lists  
Flashes: new call, new message/firmware



**End Call key, On/Off key:**

End call, cancel function (press briefly)  
Return to idle status (press and hold)  
Switch handset on/off (press and hold)



**Fast Access key (press and hold):**

Listen to messages on a network mailbox or on the integrated answering machine



**\* key:** Ringer on/off (press and hold)




**# key:** Keypad lock on/off (press and hold)



**Flash/Pause key**



**Open Quick List**

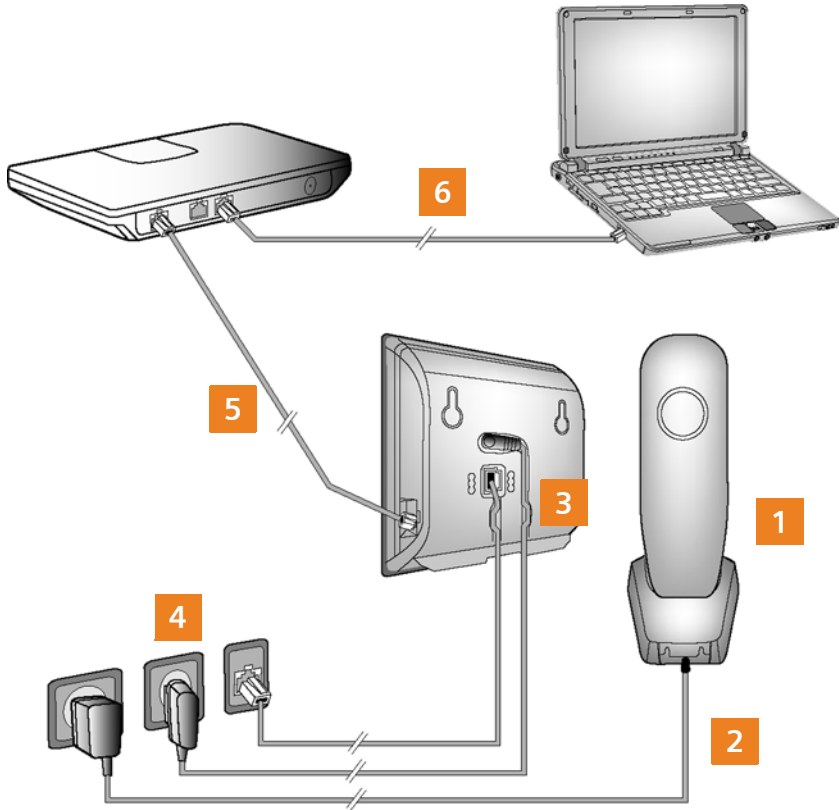

- 1 Preparing the handset: inserting the batteries
- 2 Connecting the charging cradle to the power supply and charging the batteries
- 3 Connecting the phone cord and power cable to the base station
- 4 Connecting the base station to the fixed-line telephone network (PSTN) and the power supply
- 5 To connect the base station to the Internet, first connect the base station to the router (connection via router and modem or via router with integrated modem)
- 6 PC in LAN (optional) – for advanced configuration of the Gigaset S675 IP base station

## 1 Inserting the supplied batteries and closing the battery cover



- > Check the polarity when inserting the batteries (see symbols in or on the battery compartment).
- > Only use the recommended rechargeable batteries.


Once the batteries have been inserted, the handset switches on automatically.

- > First, align the notches on the side of the battery cover with the protrusions on the inside of the housing.
- > Then press the cover until it snaps into place.




> The display is protected by a plastic film. Please remove this protective film.


## 2 Connecting the charging cradle and charging the batteries

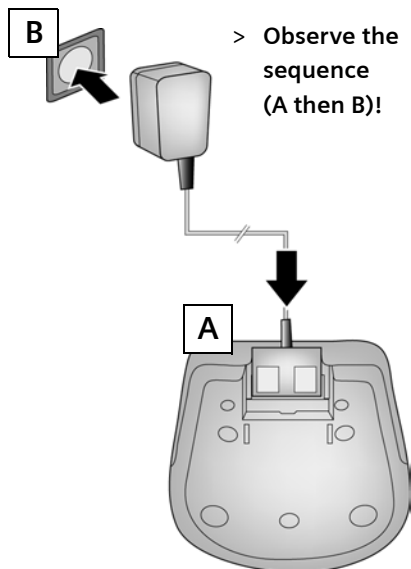

- > Place the handset in the charging cradle and wait until the batteries are fully charged.

- > Do not put the handset back in the charging cradle until the batteries are fully discharged through use.
- > After the first battery charge **and** discharge, you may place your handset in the charging cradle after every call.
- > The battery charging status is displayed in the idle display:  (empty to full).

### 3 Connecting the phone cord and power cable to the base station

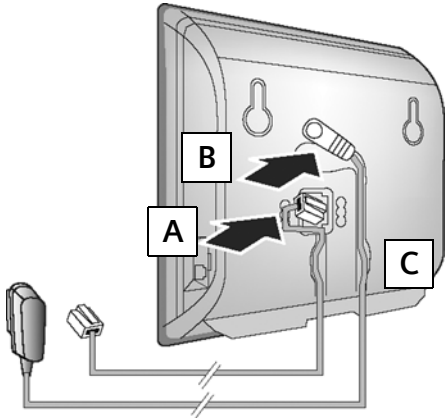


- A** Insert the phone cord connector into the telephone jack at the rear of the base station.
- B** Insert the power cable of the power adapter into the power port connector at the rear of the base station.
- C** Insert both cables into their respective cable recesses.


Only use the supplied phone cord and the supplied power adapter.

### 4 Connecting the base station to the fixed-line telephone network and power supply

- A** Insert the phone cord connector into the telephone jack in the wall.
- B** Then insert the power adapter into the power outlet.


Keep the power adapter **plugged in at all times** for operation, as the phone does not work without being connected to power.

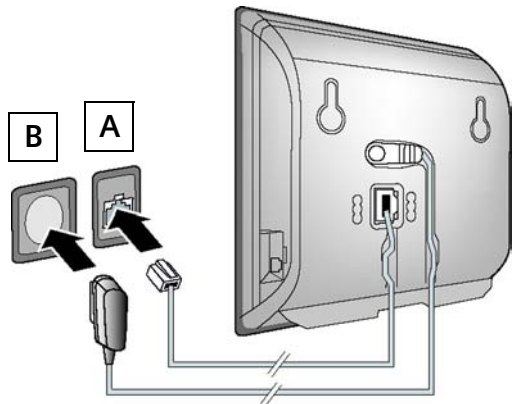

You can now use your phone to make calls via the fixed-line telephone (PSTN) network: Enter the number using the handset, and then **briefly** press the Talk key .

The local answering machine is also activated.


## 5 Connecting the base station with the router (Internet)

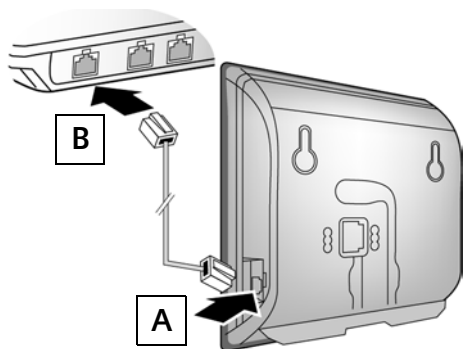

- A** Connect one side of the Ethernet cable into the LAN port on the side of the base station.
- B** Insert the other side of the Ethernet cable into a open LAN port on your router.

Use the Ethernet cable supplied.

As soon as the cable connecting the phone and router is plugged in and the router is switched on, the button lights up on the front of the base station (Paging button).

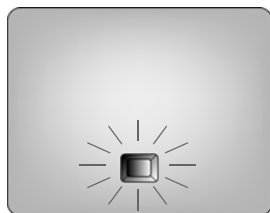

## 6 Connecting the PC to the router (optional)

You can change the settings on the phone's base station using a PC connected to your phone via the router.

> Connect a PC to an open LAN port on your router.

> The procedure in steps **7** to **11** requires that your phone is automatically assigned an IP address by the router (i.e. DHCP is enabled on router and phone).

**Exception:** (e.g. if DHCP is not enabled on the router) you will have to assign a static IP address to the base station for LAN access. You must enter this IP address on the handset before carrying out the following steps. Further information can be found in the user guide on the enclosed CD.




The following handset menu can be used to make the entry:

(press right) → → Base → Local Network → enter system PIN (default PIN is 0000).


## 7 Entering your name in the Gigaset.net directory

**Gigaset.net**\* is a VoIP service provided by Gigaset Communications GmbH, which you can use to make **free calls** to other Gigaset VoIP users.

The **first** time you open the Gigaset.net directory, complete the following steps and an entry will be created in the Gigaset.net directory for you:

- > Press down on the Control key  to open the handset directory.
- > Press down on the Control key  repeatedly until Gigaset.net is selected.
- > Press the green Talk key .

A connection to the Gigaset.net online directory is established. You will see the following display:

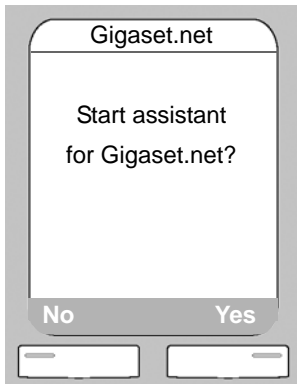

- > Press the right-hand Display key under **Yes**.



- > Using the Number keys, enter the name that you would like to be listed under in the Gigaset.net directory.
- > Press the right Display key **OK**.

If an entry with this name already exists, the message "Nickname already exists." will be displayed. You will be prompted to enter a name again.

If an entry in the Gigaset.net directory is successful, the message "Your user name has been added to Gigaset.net." will be shown.

### \* Exclusion of liability

Gigaset.net is a voluntary service provided by Gigaset Communications GmbH with no liability nor guarantee for the availability of the network. This service can be terminated at any time with a notice period of three months.

## Testing your VoIP connection

You can test the Gigaset.net connection to the Internet by calling the Gigaset.net echo service:

> Enter one of the following phone numbers:

**12341#9** (English)

**12342#9** (Dutch)

**12343#9** (Italian)

**12344#9** (French)

**12345#9** (German)

**12346#9** (Spanish)

> Press the Talk key .

> When prompted, speak into the microphone on the handset.

If you hear your own voice, your base station is connected to the Internet.

If you do not hear your voice, check your phone and router settings.

Instead of using the following procedure, you can also enter the VoIP access data using your PC (steps **8** to **11**):

- > Launch the Web browser on your PC.
- > Enter the URL **http://www.Gigaset-config.com** in the address field of the Web browser and press the Return key.

You are connected to your base station's Web configurator. You will find a description of this in the user guide on the enclosed CD.

### Precondition for the following steps:


Before being able to use VoIP for making/receiving calls, you will need to provision and activate a VoIP account.

- > Set up a VoIP account with a VoIP provider.
- > Have the VoIP account information you received from your VoIP provider at hand.

### You will need:

- > Your registration name (login ID), your password and, if applicable (provider-dependent), a user name (often this is your VoIP phone number).\*

## **8** Starting the configuration process

When your handset is sufficiently charged (approx. 20 minutes after you have placed it in the charging cradle), the Message key  on the handset flashes.

 


- > Press the Message key  on the handset.

\* Automatic configuration:


If your provider supports "automatic configuration", you will receive an "auto-configuration code" instead of an authentication name and password.

VoIP configuration with an auto-configuration code is described in the user guide on the enclosed CD. After configuration, please proceed as described in section **12**.


If "Update firmware?" is shown in the display, updated firmware is already available for your phone. Press the right-hand Display key **Yes**. The new firmware will be loaded. This takes approx. 3 minutes. The Message key  will now flash again.

> Press the Message key  to start configuration.

## 9 Starting the connection assistant, entering the PIN

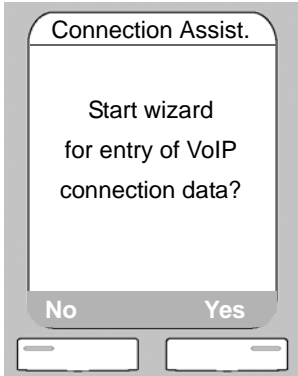


> Press the key below **Yes** on the display (= right Display key).

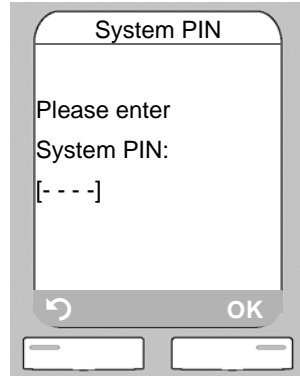


> Using the Number keys, enter the base station's system PIN. The default PIN is "0000".

 
> Press the right-hand Display key **OK**.


If the connection assistant does not start properly, you can start it via the following handset menu:  (press right) →  → Telephony → Connection Assist.

## 10 Selecting a provider and loading provider data on the base station



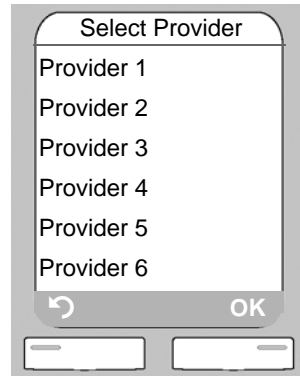

 - > Select your country with the Control key  (press down arrow).
- > Press the Display key **OK**.



- > Select your provider with the Control key  (press down arrow).
- > Press the Display key **OK**.

If your provider does not appear in the list, you have the following options:


- > Press the left Display key  twice and continue as described in **11**.  
However, you can only make a call via VoIP once you have completed the provider details using the Web configurator. Your VoIP provider will supply you with this data.
- > Exit the connection assistant by holding the End Call key . Then, proceed by entering the provider and VoIP account details using the Web configurator.

You will find more detailed information about this in the user guide on the enclosed CD.

## 11 Entering VoIP account data



- > Using the Number keys, enter the authentication name (user identification) that you received from your VoIP provider. This entry is case-sensitive.
- > Press the right Display key **OK**.

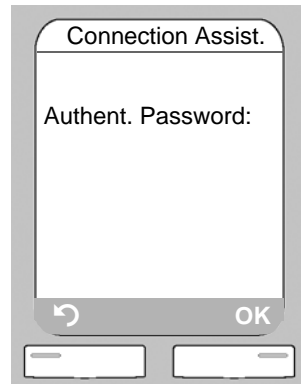

- > Using the Number keys, enter the authentication password that you received from your provider. This entry is case-sensitive.
- > Press the right Display key **OK**.


- > To switch between upper and lower case and digits, press the **#↵** key (several times if necessary).
  - > Characters entered incorrectly can be deleted using the left Display key **⏪**. The character to the left of the cursor will be deleted.
  - > You can navigate within the input field using the Control key **⏮** (press right/left).
- > Depending on your provider, you may be prompted to enter a user name. Enter it as described above.

If you have made all the required entries, the message "Connection data complete" will appear briefly on the display.

You can enter five additional VoIP accounts (VoIP phone numbers) via your base station's Web configurator. You will find more information in the user guide on the enclosed CD.


## 12 Completing and testing VoIP settings

The handset switches to idle status. The idle display status is displayed.

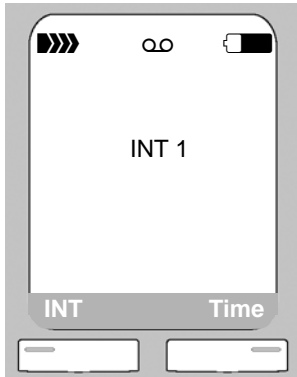

- > Test whether your VoIP data is complete and has been stored in the phone correctly.

Making a VoIP call:

Enter a number using the handset keypad and press and **hold** the Talk key .



If a VoIP connection cannot be established, a corresponding message will be shown in the display.

To ensure that you can always be reached via the Internet, the router must be permanently connected to the Internet.



In the user guide on the enclosed CD, you will find detailed information about setting up and operating your phone, as well as possible solutions to frequently asked questions and common problems.


 

 
 
## Making calls

- > Enter a phone number using your handset's Number keys.  
Please note that, even with local calls, you may need to dial the area code for calls via VoIP (provider-dependent).
  - > **Briefly** press the Talk key  if you want to make a call via the **fixed line network**.
- Or
- > Press and **hold** the Talk key  if you want to make a call via **VoIP**.

When making a call via VoIP, IP is shown in the top right-hand corner of the display.

## Operating the answering machine

### Activating/deactivating the answering machine



- > Press right on the Control key  to open the menu.
- > Enter     using the handset's Number keys.  
Ans Machine is selected in the display.

The answering machine is activated if  is displayed after Ans Machine.

The answering machine is deactivated if  is displayed.

 
 

 

- > Press the Display key below **OK** to change the status of the answering machine (on/off).

### Playing back messages


- > Press the Message key . Select the Ans M. list using the Control key  (press down) and press the Display key below **OK**.


Message playback is started.

You can control message playback via the Number keys on your handset:



-  Go to the start of the current message.  
Press repeatedly to go to the previous messages.
-  Pause/resume playback.
-  Skip to next message.
-  Mark current message as "new".  
Start playback of the following message.
-  Delete current message.

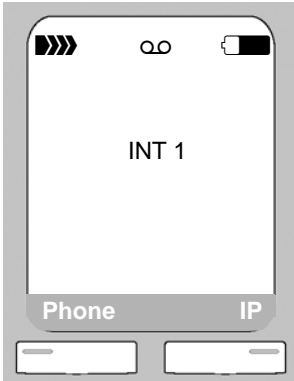You can use your phone to view pre-configured online content and access pre-configured applications via the Gigaset.net portal.





- > When the handset is in idle status, press the right of the control key  to open the main menu.





- > Press once on the right of the control key  to select the icon . Info Center is shown in the header.
- > Press the right display key **OK**.

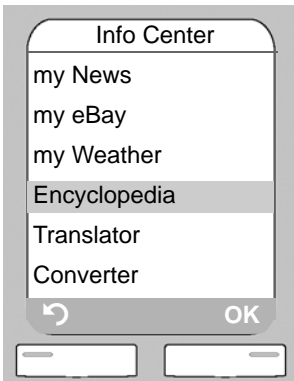
A list of info services is opened.

 

- > Press the bottom of the control key  repeatedly until the desired info service is selected.
- > Press the right display key **OK** to open the info service.

**Navigation:** To skip back to the previous page, press the left display key .

To skip back to the info center menu, briefly press the end call key .

To go offline, press and hold the end call key .

- > The info services listed in the picture above are only given as examples. Info Services content will vary depending on country, provider, and network.
- > Visit the Gigaset.net homepage [www.gigaset.net](http://www.gigaset.net) to compile your personal info services. In the user guide on the enclosed CD you will find more information.

**Customer Care Warranty for Cordless Products**  
To obtain Customer Care Warranty service,  
product operation information, or for problem resolution, call:

Toll Free: 1-866-247-8758

7:00 a.m. – 7:00 p.m. EST Monday-Saturday excluding holidays (English)

7:00 a.m. - 12:00 p.m. (noon) EST Monday-Saturday (French)

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the base station and receiver.
3. Connect the base station into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

**Notice to Hearing Aid Wearers:**

This phone system is compatible with inductively coupled hearing aids.

**Notice:**

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

VoIP customers may need to provide location or other information to their VoIP providers, and update this information if they change locations, for their VoIP 911 service to function properly.

Please address any questions about DSL and VoIP access to your service provider.