

Gigaset SL785



Issued by
Gigaset Communications GmbH
Schlavenhorst 66, D-46395 Bocholt
Gigaset Communications GmbH is a licensee of the trademark Siemens

© Gigaset Communications GmbH 2009
All rights reserved. Subject to availability.
Rights of modification reserved.

www.gigaset.com

SIEMENS

Brief overview



- 1 **Display** in idle status
- 2 **Battery charge status** (→ page 16)
- 3 **Display keys** (→ page 20)
- 4 **Message key** (→ page 34)
Access to Calls and Message lists.
Flashes: New message
- 5 **End Call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Pound key (#)**
Keypad lock on/off (press and hold in idle status);
Toggle between uppercase/lowercase letter and digits
- 7 **Quick list key** (→ page 29)
Open Quick list
- 8 **Charging socket**
- 9 **Microphone**
- 10 **Flash key**
- Consultation call (flash)
- Insert a dialing pause (press and hold)
- 11 **Asterisk key (*)**
Ringer on/off (press and hold);
With an open connection: switch between pulse dialing/touch-tone dialing (press briefly);
Text input: Open table of special characters
- 12 **Key 1**
Dial answering machine/Network mailbox (press and hold)
- 13 **Talk key**
Accept a call; start dialing (press and hold)
- 14 **Handsfree key**
Switch between earpiece and handsfree mode;
Lights up: handsfree activated;
Flashes: incoming call
- 15 **Control key** (→ page 19)
- 16 **Signal strength** (→ page 16)
- 17 **Answering machine symbol**
Answering machine switched on;
Flashes: Answering machine is recording a message or is being operated by another internal party

Base station



Registration/
Paging key
(→ page 44)

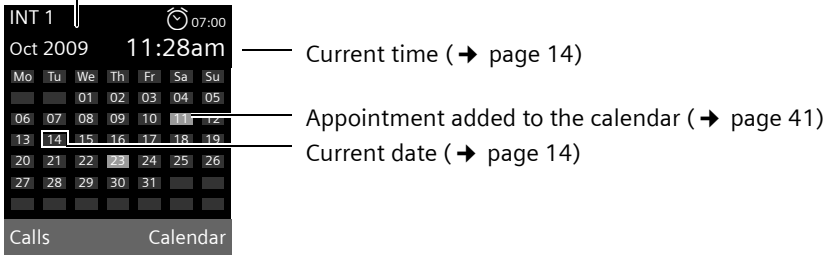
 
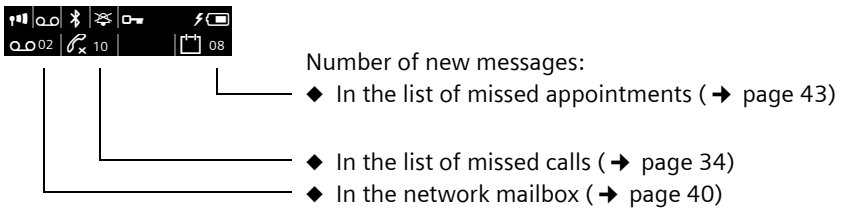
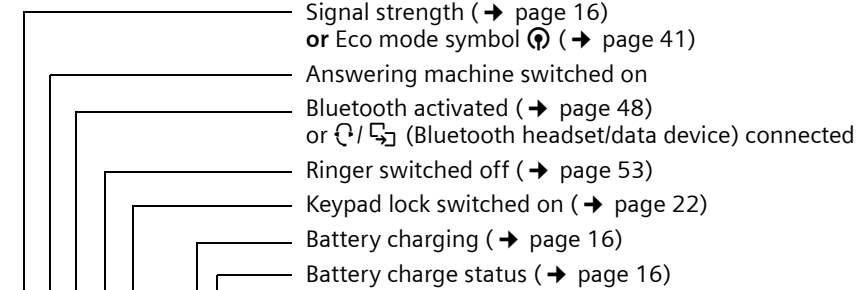
Note:

Pictures in this user manual may differ from the actual product.



Display symbols

The following symbols are displayed regardless of the settings and the operating status of your telephone:



Signaling

External call (→ page 27)



Alarm clock (→ page 43)



Internal call (→ page 45)



Appointment (→ page 41) / Anniversary (→ page 32)



Answering machine is recording (→ page 35)



Contents

Brief overview	1
Safety precautions	6
Gigaset SL785 – more than just a telephone	7
First steps	8
Checking the package contents	8
Connecting the base station	9
Installing the base station and charging cradle	10
Setting up the handset for use	11
Setting the date and time	14
Setting up area codes	16
Connecting the USB cable	17
What would you like to do next?	18
Using the phone	19
Using the Control key	19
Using the Display keys	20
Using the keys on the keypad	20
Correcting incorrect entries	20
Using the menus	21
Activating/deactivating the handset	22
Activating/deactivating the keypad lock	22
Using this guide	23
Menu tree	25
Making calls	27
Making an external call	27
Ending a call	27
Accepting a call	27
Using Caller ID	28
Using the Handsfree feature	28
Switching to mute	28
Using the directory and lists	29
Using the Directory/Quick list	29
Using the Last Number Redial list	33
Using the Answering Machine Message list	33
Using Call lists	33
Opening lists with the Message key	34

- Operating the answering machine on the Gigaset SL785 base station 35**
 - Using the handset 35
 - Activating/deactivating call screening 38
 - Setting the recording parameters 38
 - Resetting fast access for the answering machine using key 1 39
 - Operating remotely 39
- Using the network mailbox 40**
 - Configuring Fast Access for the network mailbox 40
 - Viewing the network mailbox message 40
- ECO DECT 41**
- Setting an appointment (calendar) 41**
 - Displaying missed appointments, anniversaries 43
- Setting the alarm clock 43**
- Using several handsets 44**
 - Registering handsets 44
 - Deregistering handsets 44
 - Locating a handset ("paging") 44
 - Changing the base station 45
 - Making internal calls 45
 - Listening in to an external call 46
 - Changing the name of a handset 46
 - Changing a handset's internal number 46
- Using a handset as a room monitor 47**
- Using Bluetooth devices 48**
- Handset settings 50**
 - Quickly accessing functions and numbers 50
 - Changing the display language 51
 - Setting the display 51
 - Activating/deactivating auto answer 52
 - Changing the handsfree/earpiece volume 52
 - Changing ringers 52
 - Using the Resource Directory 54
 - Activating/deactivating advisory tones 55
 - Setting long-distance and area codes 55
 - Restoring the handset default settings 56
- Base station settings 56**
 - Protecting against unauthorized access 56
 - Activating/deactivating music on hold 56
 - Restoring the base station to the factory settings 56

Connecting the base station to the PABX	57
Dialing modes and setting Flash Duration	57
Setting pauses	57
Switching temporarily to touch-tone dialing (DTMF)	57
Questions and answers	58
Protecting our environment	59
Appendix	60
Caring for your phone	60
Contact with liquid	60
Specifications	60
Writing and editing text	61
Additional functions in the PC interface	61
Industry Canada Certification	63
FCC / ACTA Information	63
Safety precautions	65
End-user limited warranty	66
Mounting the base station to the wall	72
Index	73

Safety precautions

Warning

Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied, as indicated on the bottom of the base station.



Use only the **recommended, rechargeable batteries** (→ page 60); other batteries pose significant health risks and could result in personal injury.

Do not charge the handset in charging unit or base station while the headset is connected.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment (such as a doctor's office).



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise, you risk serious and permanent damage to your hearing.



Do not install the charging cradle in bathrooms or shower areas. The base station and charging cradle are not waterproof (→ page 60).



Do not use your phone in environments that pose an explosion hazard (e.g., paint shops).



If you give your phone to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use, as they could interfere with other wireless services.

Gigaset SL785 – more than just a telephone

Your telephone sets new standards for the way you communicate at home.

The configuration and user interface of the cordless phone are unique, providing you with first-class voice quality in handsfree mode, while the various ports (Bluetooth, USB) offer you high flexibility.

The large TFT (thin-film transistor) display, user-friendly keypad, and clearly laid out menu are very simple to use.

It can do a whole lot more. You can:

- ◆ Use Bluetooth™ for wireless communication with other devices (e.g., headsets) that also use this technology.
- ◆ Synchronize your address books on your telephone, mobile phone, and PC with Bluetooth™ or using the USB port and Gigaset QuickSync software.
- ◆ Save appointments and anniversaries in your phone, and it will remind you of them in advance.
- ◆ Designate important people as VIPs so you can identify important calls from the ringer.
- ◆ Program the keys of your phone with important numbers or frequently used functions. The number is then dialed or the function started by simply pressing a key.
- ◆ If you do not wish to be disturbed, you can simply set up a time control so that your phone will only ring when it is convenient. VIP calls will still be connected.

You can find additional information on your telephone at www.gigaset.com/gigasetSL785.

Have fun using your new phone!

First steps

Checking the package contents



- 1 One Gigaset SL785 base station
- 2 One base station cover stand
- 3 One power adapter for the base station
- 4 One Gigaset SL78H handset
- 5 One battery
- 6 One battery cover
- 7 One belt clip
- 8 One charging cradle with power adapter
- 9 One phone cord
- 10 One user guide
- 11 USB cable
- 12 CD-ROM (driver for USB cable)

Connecting the base station

- ▶ Connect the power adapter **1** and phone jack **2** to the base station, and place the cables in the cable recesses.



- ▶ Place the cover in the notches on the back of the base station and click into place (**not if mounting on the wall** → page 72).

- ▶ **First** connect the power adapter **3**.
- ▶ **Then** connect the phone jack **4**.



Please note:

- ◆ The power adapter must **always be connected**, as the phone will not operate without connection to an electrical outlet.
- ◆ Use only the power adapter and phone cord **supplied**.

Installing the base station and charging cradle

The base station and charging cradle are designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

- ▶ Install the base station on a level, nonslip surface in a central location in your house or apartment, or mount the base station on the wall (→ page 72).

Please note

- ◆ Keep in mind the range of the base station. It is up to 985 feet (300 m) in unobstructed outdoor areas and up to 165 feet (50 m) inside buildings. The range is reduced when Eco mode (→ page 41) is activated.
- ◆ Never expose the telephone to heat sources, direct sunlight, or other electrical devices.
- ◆ Protect your phone from moisture, dust, corrosive liquids, and fumes.

Setting up the handset for use

The display and keypad are protected by a protective plastic film.
Please remove the protective film!

Inserting the battery and closing the battery cover

Warning

Use only the rechargeable batteries (→ page 60) recommended by Gigaset Communications GmbH *; using other batteries could result in significant health risks and property damage. For example, the outer casing of the batteries could be destroyed, or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not the recommended type.

* Gigaset Communications GmbH is a trademark licensee of Siemens AG.

- ▶ First insert the battery at the top of the receptacle (a).
- ▶ Then press the battery downwards (b) until it clicks into place.



- ▶ Align the protrusions on the side of the battery cover with the notches on the inside of the casing.
- ▶ Then press the cover until it clicks into place.

First steps

To **connect the USB cable or change the battery** open the battery cover:

- ▶ Remove the belt clip (if attached).
- ▶ Place a coin into the notch at the bottom of the casing and pull the battery cover upwards.



To **change the battery**, place a coin in the cavity in the casing and pull the battery upwards.



Attaching/removing the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ **To attach** – Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage the notches.
- ▶ **To remove** – Using your right thumb, apply pressure to the center right of the belt clip, push the fingernail of your left index finger between the clip and the casing, and lift the clip upwards.



Placing the handset in the charging cradle

- ▶ Insert the power adapter of the charging cradle into the electrical outlet.
- ▶ Place the handset in the charging cradle, with its **display facing forward**.

The handset is registered with the base station at the factory. You do not need to complete a registration. To use a different base station or use additional handsets with your base station, register the devices manually (→ page 44).

To charge the battery, leave the handset in the charging cradle.

First battery charge and discharge

The correct charge status can only be displayed if the battery is first fully charged **and then** discharged.



- ▶ Place the handset in the charging cradle for **at least six (6) hours**.



- ▶ Once the battery is fully charged, remove the handset from the charging cradle and do not put it back again until the battery is fully discharged.

Please note

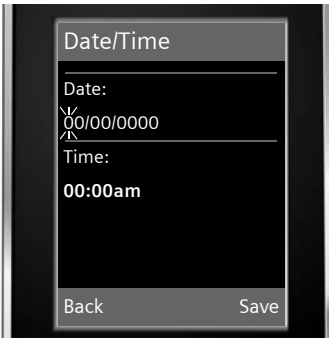
- ◆ After the first battery charge **and** discharge, you can place your handset in the charging cradle after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the battery from the handset and reinsert it.
- ◆ The battery may heat up during charging. This is not dangerous.

Setting the date and time

Set the date and time so that the alarm and the calendar can be used.



- ▶ Press the key below **Time** on the display screen to open the input field. (If you have already set the time and date, open the input field using the menu (→ page 26))

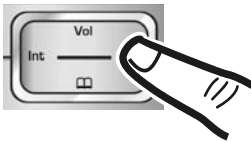


The **Date/Time** submenu is shown on the display.

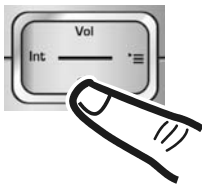
- ▶ The active input position flashes. Enter the month, day, and year as an 8-digit number using the keypad (e.g.,

1	ao	0	oper	1	ao	4	ghl
2	abc	0	oper	0	oper	wxyz	9

 for 10/14/2009).



- ▶ Press the **right** or **left** Control key to change the input position and correct an entry.

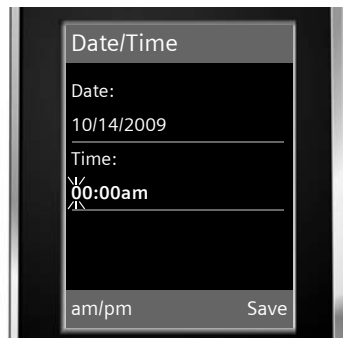


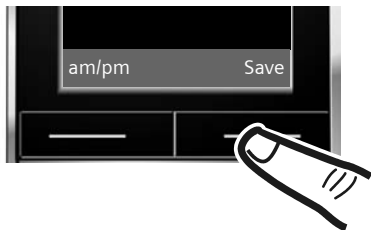
- ▶ Press **down** on the Control key to switch to the time input field.

- ▶ Enter the hours and minutes as four-digit numbers using the keypad (e.g.,

0	oper	7	pqrS	1	ao	5	jkl
---	------	---	------	---	----	---	-----

 for 07:15 am). Press the Display key am/pm to change the **am/pm** setting. The default setting is am. Change the input position with the Control key, if necessary.





- ▶ Press the key below **Save** on the display screen to confirm your entry.




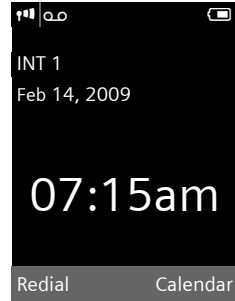
The display shows **Saved**. You will hear a confirmation tone.






 

- ▶ Press the key below **Back** on the display screen to return to idle status.

Display in idle status

Once the phone is registered and the time set, the idle display is shown, as in this example. If the answering machine is activated, the answering machine icon  will be displayed in the header.



The following is displayed after successful registration:

- ◆ The strength of the reception signal between the base station and handset:
 - Poor to good: 
 - No reception:  flashes
- ◆ Battery charge status:
 -  (dead to full)
 -  flashes red: battery almost dead
 -  (charging)

Your answering machine is set with a prerecorded announcement, however, you can customize that announcement for your own requirements (→ page 35).





 
Please note

The display of the calendar in idle status can be activated or deactivated (→ page 41).





 
Setting up area codes

Before you can return a call from the Calls list (→ page 33), you must store the local area code of the area in which your phone is being used. If your phone is in a multiple area code area, you must also store the extra codes for that area.

Local Area Code

-  →  → Telephony → Local Area Code
-  Enter the local area code.
-  Press the Display key.
-  Press and **hold** (idle status).

Extra Codes

-  →  → Telephony → Extra Codes
-  Enter the extra code.
-  Press the Display key.
-  Press and **hold** (idle status).

Repeat the above steps until all the extra codes have been entered for your area. A maximum of five (5) extra codes can be stored.

Your phone is now ready for use!

Connecting the USB cable

To connect your telephone to a PC (→ page 61), you can connect the supplied USB cable to the back panel of your phone.

- ▶ Remove the belt clip (if attached)
(→ page 12).
- ▶ Remove the battery cover
(→ page 12).
- ▶ Connect the USB cable to the USB socket **1**.



What would you like to do next?

Now that you have successfully started your phone, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important topics.


 
If you are unfamiliar with menu-driven devices, such as other Gigaset telephones, you should first read the section entitled "Using the phone" (→ page 19).

 
Information on is located here.
Setting the ringer and volume	page 52
Setting the handset volume	page 52
Recording your own announcement for the answering machine	page 35
Setting Eco mode	page 41
Operating the telephone on a PABX	page 57
Registering existing Gigaset handsets to a base station	page 44
Transferring directory entries from existing Gigaset handsets to your new handset(s)	page 31
Using Bluetooth devices	page 48
Connecting the phone to the PC	page 61

If you have any questions about using your phone, please read "Questions and answers" (→ page 58) or contact our Customer Care team (→ page 66).

Using the phone





Using the Control key

Below, the side of the Control key that you must press in a given operating situation is shown in black (top, bottom, right, left, center), for example,  for "press right on the Control key" or  for "press the center of the Control key."





The Control key has a number of different functions:


 
 
 

 
When the handset is in idle status

-  Open the menu for setting the handset's call volume (→ page 52).
-  Open the main menu.
-  Open the directory.
-  Open the list of handsets.




In the main menu, submenus, and lists

-  /  Scroll up/down line by line.

In input fields

You can use the Control key to move the cursor up , down , right , or left . Press and **hold**  or  to move the cursor **word by word**.

During an external call

-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

Functions when pressing the middle of the Control key

Depending on the operating situation, the key has different functions.

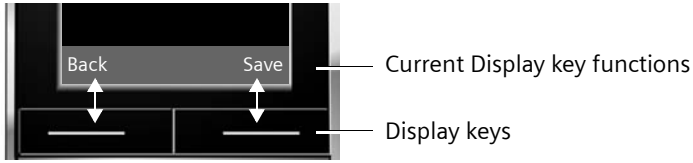
- ◆ **In idle status** the key opens the main menu.
- ◆ **In submenus and selection and input fields**, the key takes on the function of the Display keys **OK**, **Yes**, **Save**, or **Change**.

Please note

In these instructions, functions are explained using the right Control key and the Display keys. However, if you prefer, you can use the Control key as described above.

Using the Display keys

 
 
 
The function of the Display keys changes depending on the particular operating situation. Example:



Some important Display keys:

Options	Open a menu for further functions.
OK	Confirm selection.
< C	Delete key: Backspace deletes character/word.
Back	Go back one menu level or cancel operation.
Save	Store entry.
Redial	Open the Last Number Redial list.

Using the keys on the keypad

 /  / , etc.

Press the matching key on the handset.



Enter digits or letters.

Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the Control key. You can then:

- ◆ Press **<C** to delete the **character** to the left of the cursor.
Press and **hold <C** to delete the **word** to the left of the cursor.
- ◆ Insert characters to the left of the cursor.
- ◆ Overwrite the highlighted (flashing) character (e.g., when entering the date or time).

Using the menus


Your telephone's functions are accessed using a menu that has a number of levels.

 
Main menu (first menu level)

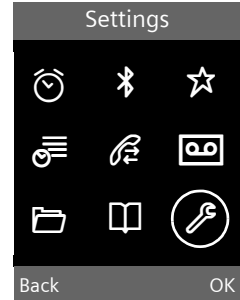
- ▶ When the handset is in idle status, press the **right**  Control key to open the main menu.

The main menu functions are shown as icons on the display. The selected function is marked by an orange circle around the symbol, and the corresponding name is shown in the display header.

To access a function, open the corresponding sub-menu (next menu level):

- ▶ Use the Control key  to select the required function, and press the Display key **OK**.


Briefly press the Display key **Back** or the End Call key  to revert back to idle status.




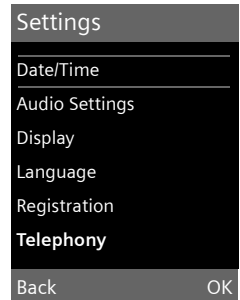
Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:


- ▶ Scroll to the function with the Control key  and press **OK**.

Briefly press the Display key **Back** or the End Call key  to return to the previous menu level/cancel the operation.



Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the End Call key .

Or:

- ▶ Do not press any key: After 2 minutes, the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the Display key **OK**, **Yes**, **Save**, or **Change** will be lost.

An example of the display in idle status is shown on page 16.

Activating/deactivating the handset



With the phone in idle status, press and **hold** the End Call key to switch off the handset. A confirmation tone plays as the phone turns off.

Press and **hold** the End Call key again to switch the handset on.

Please note


When the handset is switched on, an animation of a clock will be displayed for several seconds.

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the Pound key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated, you will see the  icon on the display and a message when you press a key.

The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished.

Using this guide

The operating steps are shown in abbreviated form.


Example:

The illustration:


 → **Settings** → **Telephony** → **Auto Answer** (☑ = on)

means:




- ▶ Press **right** on the Control key  to open the main menu.



- ▶ Use the right, left, down, and up Control key  to navigate to the **Settings** submenu.

- ▶ Press the Display key **OK** to confirm your selection.



- ▶ Press down on the Control key  until the **Telephony** menu appears on the display.

- ▶ Press the Display key **OK** to confirm your selection.



The **Auto Answer** function has already been selected.

 
- ▶ Press the Display key **Change** to activate/deactivate the function.




Changes are effective immediately and do not have to be confirmed.

- ▶ Press the key below **Back** on the display to return to the previous menu level.

or

Press and **hold** the End Call key  to return to idle status.

Menu tree

With the telephone in **idle status**, press  (open main menu):


 **Alarm Clock** → page 43

 **Bluetooth**

Activation	→ page 49
Search for Headset	→ page 49
Search for DataDevice	→ page 49
Known Devices	→ page 49
Own Device	→ page 50

 **Additional Features**

Room Monitor	→ page 47
Missed Alarms	→ page 43

 **Calendar** → page 41

 **Call Lists**

All Calls	→ page 33
Outgoing Calls	→ page 33
Accepted Calls	→ page 33
Missed Calls	→ page 33

 **Voice Mail**

Play Messages	Network Mailbox	→ page 40
	Answering Machine	→ page 35
Activation	→ page 35	
Announcements	Record Announcemnt.	→ page 35
	Play Announcement	→ page 36
	Delete Announcemnt.	→ page 36
	Record Advisory Msg.	→ page 35
	Play Advisory Message	→ page 36
	Delete Advisory Msg.	→ page 36
Recordings	→ page 38	
Call Screening	→ page 38	
Network Mailbox (only on base station without an answering machine)		
Set Key 1	Network Mailbox	→ page 40
	Answering Machine	→ page 39

Menu tree

Resource Directory

Screensavers	→ page 54
Caller Pictures	→ page 54
Sounds	→ page 54
Capacity	→ page 54

Directory → page 29


 
Settings

Date/Time	→ page 14	
Audio Settings	Call Volume	→ page 52
	Ringer Settings	→ page 53
	Advisory Tones	→ page 55
	Music on Hold	→ page 56
Display	Screensaver	→ page 51
	Backlight	→ page 52
Language	→ page 51	
Registration	Register Handset	→ page 44
	De-register Handset	→ page 44
	Select Base	→ page 45
Telephony	Auto Answer	→ page 52
	Area Codes	→ page 55
	Listening In	→ page 46
	Dialing Mode	→ page 57
	Flash Duration	→ page 57
	Local Area Code	→ page 16
	Extra Codes	→ page 16
System	Eco mode	→ page 41
	System PIN	→ page 56
Reset	Handset Reset	→ page 56
	Base Reset	→ page 56

 

 
Making calls

 
Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the Talk key.

Or:

  Press and **hold** the Talk key , and then enter the number.

You can cancel the dialing operation with the End Call key .

You are shown the duration of the call while the call is in progress.

Please note

Dialing using the directory, the Quick list (page 1, page 29) or the Calls and Last Number Redial lists (page 33/ page 33) saves you from having to re-enter numbers.


Continuing a call on a Bluetooth headset

Requirement: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 49).

 
Press the Talk key on the Bluetooth headset; it may take up to 5 seconds to establish a connection to the handset.

For further details about your headset, see the user guide issued with it.




Ending a call

 Press the End Call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen, and by the flashing Handsfree key .

You can accept the call by:

- ▶ Pressing the Talk key .
- ▶ Pressing the Handsfree key .
- ▶ Press the Display key  to forward the call to the answering machine (→ page 37).

If the handset is in the charging cradle and the **Auto Answer** function is activated (→ page 52), the handset will take a call automatically when you lift it out of the cradle.

To deactivate the ringer, press the **Silence** Display key. You can take the call as long as it is displayed on the screen.

Accepting a call on a Bluetooth headset

Requirement: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 49).

Only press the Talk key on the headset when the headset rings; it can take up to 5 seconds.

For further details about your headset, see the user guide issued with it.

Using Caller ID

Caller ID (CID) and Caller Name ID (CNID) are optional subscription services provided by your telephone service provider. These features supply incoming caller identification information that will be displayed on your handset.

Call display with Caller ID/ Name

If the caller's number is saved in your directory, the caller's name will be displayed. If you have allocated a picture to the caller (→ page 30), this will appear in the upper part of the display.



- 1 Ringer icon or CID picture
- 2 Number or name of caller

The following is displayed in place of the number:



- ◆ **External**, if no number is transmitted.
- ◆ **Unavailable**, if the caller has not arranged caller ID.

Using the Handsfree feature

In handsfree mode, instead of holding the handset to your ear, you can put it down, for example, on the table in front of you. This allows others to participate in the call.


Activating/deactivating handsfree mode

Activating while dialing

  Enter the number and press the Handsfree key.



- ▶ You should inform your caller that you are using the handsfree function so that they know someone else is listening.

Switching between earpiece and handsfree mode

 Press the Handsfree key.

During a call and when listening to the answering machine, activate or deactivate handsfree mode.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the Handsfree key  while placing the handset into the base station. If the Handsfree key  does not light up, press the key again.

For instructions on how to adjust the loudspeaker volume, → page 52.

Switching to mute

You can deactivate the microphone in your handset during an external call.

Mute Press the Display key to mute the handset. The display shows **Microphone is off**.

Mute off Press the Display key to reactivate the microphone.

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Quick list
- ◆ Last Number Redial list
- ◆ Call lists
- ◆ List of missed appointments
- ◆ Answering Machine Message list

You create the directory and Quick list for your own individual handset. You can also send lists/entries to other handsets (→ page 31).

Using the Directory/Quick list

You can save a total of 500 entries in the directory and Quick list.


Please note

For quick access to a number from the directory or the Quick list (using Quick Dial keys), you can assign the number to a key (→ page 50).

Directory

In the **directory**, you can save

- ◆ A contact's first and last names, and up to three numbers
- ◆ E-mail addresses
- ◆ Anniversaries, with reminder
- ◆ VIP ringer, with VIP symbol
- ◆ CID pictures

You open the directory in idle status using the  key.

Length of the entries

First and last names:

max. 16 characters each

3 numbers: max. 32 digits each

E-mail address: max. 60 characters

Quick list

A list of name/numbers that can be Person/Business name and phone number; dial-around name and code; descriptive name and PIN, etc.

- ▶ Open the Quick list in idle status by pressing the  key.

Length of the entries

Number: max. 32 digits

Name: max. 16 characters

Storing a number in the directory

 → New Entry

- ▶ You can enter data in the following fields:

First Name: / Last Name:


 

Enter first name/and or last name.

If no name is entered in any of the fields, the phone number is saved and will be displayed as the entry in the directory list.

(For instructions on how to enter text and special characters, please see → page 61.)

**Phone (Home): / Phone (Office): /
Phone (Mobile):**

Enter a number in at least one of the fields.

When scrolling through the directory, the entries are highlighted by a prefixed symbol:  /  / .

E-Mail:

Enter e-mail address.

Anniversary:

Select **On** or **Off**.

With setting **On**:

Enter **Anniversary (Date)**, **Anniversary (Time)**, **Anniversary (Signal)**, then select the number associated with the signal style (→ page 32).

Using the directory and lists

Caller Melody (VIP):

Mark a directory entry as a **VIP** (very important person) by assigning a specific ringer to it. VIP calls are recognized by the ringer.

When scrolling through the directory, VIP entries are highlighted by the **VIP** symbol.

Requirement: Caller ID service subscription (→ page 28).

Caller Picture:

If required, select a picture to be displayed when the caller calls (see Using the Resource Directory, page 54).

Precondition: Caller ID (CID).

Save Press the Display key.

Storing a number in the Quick list

 → **New Entry**

- ▶ You can enter data in the following fields:

Name:

Enter name.

Number:

Enter the number.

Save Press the Display key.

Order of directory entries


 
Directory entries are generally sorted alphabetically by last name. Spaces and digits take first priority. If only the first name was entered in the directory, it is incorporated into the sort order instead of the last name.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To bypass the alphabetical order of the entries, insert a space or a digit in front of the first letter of the last name. These entries will then move to the beginning of the directory.

Selecting entries in the directory and Quick list

 /  Open the directory or Quick list.


You have the following options:

- ◆ Use  to scroll through the entries until the name you want is selected.
- ◆ Enter the first letters of the name (max. 8 characters); if necessary, scroll to the entry with the  key.

The directory searches for the last name. If a last name has not been added, it will search for the first name.

Dialing with the directory/Quick list

 /  →  (Select entry).

 Press the Talk key. The number is dialed.


Managing directory/Quick list entries

Viewing entries


 /  →  (Select entry).

View Press the Display key.
The entry is displayed.

Options Press the Display key.

The following functions can be selected with :

Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 31).

vCard via Bluetooth: Send a single entry in vCard format using Bluetooth.


Editing entries


 /  →  (Select entry).

View Edit Press the Display keys one after the other.

 

- ▶ Carry out changes and save.

Using other functions

 /  →  (Select entry)
→ **Options** (Open menu)

The following functions can be selected with :

Display Number

Save or modify a saved number, and then dial with  or save as a new entry; to do so, press  after the number appears on the display.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 31).

vCard via Bluetooth: Send a single entry in vCard format using Bluetooth.

Delete All

Delete **all** entries in the directory/Quick list.

Copy All

to Internal: Send the complete list to a handset (→ page 31).

vCard via Bluetooth: Send the complete list in vCard format using Bluetooth.



Available Memory

Display the available entries in the directory and Quick list (→ page 29).

Sending the directory/Quick list to another handset

Requirements:

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 /  →  (Select entry)
→ **Options** (Open menu) → **Copy Entry / Copy All** → **to Internal**



Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the **Entry copied - Copy next entry?** prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:


- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is canceled if the phone rings or if the memory of the receiving handset is full.
- ◆ Anniversary reminders, pictures, and sounds entered are not sent.

Transferring the directory as a vCard with Bluetooth

In Bluetooth mode (→ page 49), you can transfer directory entries in vCard format (e.g., to exchange entries with your mobile phone).

 →  (Select entry) → **Options** (Open menu) → **Copy Entry / Copy All** → **vCard via Bluetooth**

The list of "Known Devices" (→ page 49) is displayed.

 Select device and press **OK**.

Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (→ page 49) sends a vCard to your handset, this takes place automatically. You are informed about it on the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:



Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

Copying a displayed number to the directory

Numbers displayed in a list (e.g., the Call lists or the Last Number Redial list), or during a call can be copied to the directory.

A number is displayed:



Options → **Copy to Directory**


▶ Complete the entry → page 29.

Message playback is interrupted while transferring the number from the Answering Machine Message list.

Copying a number or e-mail address from the directory

In some situations, you can open the directory to copy a number or e-mail address, for example. Your handset does not have to be in idle status.



▶ Depending on the situation, open the directory with  or .

 Select entry (→ page 30).


Saving an anniversary in the directory


For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: **Anniversary: Off**).

Anniversaries are automatically recorded in the calendar (→ page 41).

 →  (Select entry)

View **Edit** Press the Display keys one after the other.

 Scroll to the Anniversary line.

 Select On.

▶ You can enter data in the following fields:

Anniversary (Date)

Enter month/day/year in 8-digit format.

Anniversary (Time)

Enter the hour/minute for the reminder call in 4-digit format.

Anniversary (Signal)



Select the type of signal for the reminder.

Save Press the Display key.


Please note


A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

Deactivating anniversaries

 →  (Select entry)

View **Edit** Press the Display keys one after the other.

 Scroll to the Anniversary line.

 Select **Off**.

Save Press the Display key.

Reminder call on an anniversary

In idle status, a reminder call is shown on the display of the handset (→ page 2) and signaled with the selected ringer.

You can:

Off Press the Display key to acknowledge and end the reminder call.




When you are on the phone, a reminder call is indicated on the handset with a **single** advisory tone.


Anniversaries that are indicated during a call and that are elapsed are entered in the **Missed Alarms** list (→ page 43).

Using the Last Number Redial list

 

The Last Number Redial list contains the twenty numbers last dialed with the handset (max. 32 digits). If a number is in the directory or the Quick list, then the appropriate name will be displayed.


Manual last number redial

-  Press the key **briefly**.
-  Select entry.
-  Press the Talk key again.
The number is dialed.

When a name is displayed, you can display the corresponding phone number by pressing the Display key .

Managing entries in the Last Number Redial list

-  Press the key **briefly**.
-  Select entry.
- Options** Open menu.

The following functions can be selected with :

Copy to Directory

Copy an entry to the directory (page 29).

Display Number (as in the directory, page 31)

Delete Entry (as in the directory, page 31)

Delete All (as in the directory, page 31)

Using the Answering Machine Message list

You can use the **Answering Machine Message list** to listen to the messages that are on the answering machine.

Using Call lists

 
Requirement: Caller ID service subscription (CID, page 28)

Your telephone stores various types of calls:

- ◆ Answered calls
- ◆ Outgoing calls
- ◆ Missed calls
- ◆ Calls recorded by the answering machine

You can view each type of call separately or see an overview of all calls. Each call record contains the last 20 numbers in its category.

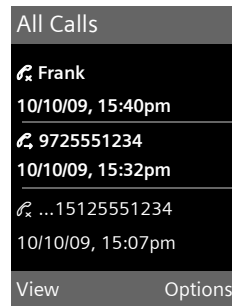
When in idle status, open the Call lists by selecting the **Calls** Display key or using the menu:






List entry

New calls are displayed at the top.

 
Example of list entries:



- ◆ List type (in header)
- ◆ Status of entry
Bold: New entry
- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 14)
- ◆ Type of entry:
 - Accepted calls ()
 - Missed calls ()
 - Outgoing calls ()

Using the directory and lists

- Calls recorded by the answering machine (OO)

Press the Talk key  to return the selected call.

Select the **View** Display key to access additional information, including, for example, the number linked with the name

Select the **Options** Display key to choose the following options:

Copy to Directory

Copy a displayed number to the directory.

Delete Entry


Delete selected entry.

Delete All


Delete all entries.

When you quit the Call lists, all entries are set to the status "old," meaning the next time you open the list, they will no longer be shown in bold.


Opening lists with the Message key

You can use the Message key  to open the following list selection:

- ◆ Answering Machine Message list / Network Mailbox, if your network provider supports this function and Fast Access is set for the network mailbox (→ page 40).
- ◆ List of missed calls
- ◆ List of missed appointments (→ page 43)

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:

Icon New message...

 ... in the Answering Machine Message list or on the network mailbox

 ... in the **Missed Call lists**

 ... in the **Missed Alarms list**

 
The number of new entries is displayed to the right of the corresponding icon.





Please note

If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

List selection

The lists displayed after pressing the Message key  depend on whether there are any new messages.

- ◆  **key does not flash (no new messages):** All the lists containing messages and the Network Mailbox list are displayed.
- ◆  **key flashes (new messages received):** You see all the lists containing **new** messages. If only one list contains new messages, it will be opened automatically.

Lists containing new messages are at the top of the list and are marked in bold font.



Select a list with . To open, press **OK**.

Operating the answering machine on the Gigaset SL785 base station


You can access the answering machine using the handset or by remote operation (from another telephone/mobile phone). You can record your own announcement or advisory message using the handset.

Answering machine mode

You can use the answering machine in two different modes.

- ◆ In **Answer & Record** mode, the caller hears the announcement and can then leave a message.
- ◆ In **Answer only** mode, the caller hears your announcement but cannot leave a message.

Using the handset

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the Handsfree key .

Activating/deactivating and setting the answering machine mode

You can choose between **Answer & Record**, **Answer only** and **Alternating**. By using the **Alternating** setting, you can activate the answer and record mode for a set period; outside this period the caller will hear the advisory message.

 →  → **Activation** (✓ = on)

Edit Press the Display key.

- ▶ You can enter data in the following fields:

Activation:

Select **On** or **Off** to activate/deactivate the answering machine.

Mode:

Select **Answer & Record**, **Answer only** or **Alternating**.

If the **Alternating** mode is selected:

Record from:

Using 4-digit format, enter hours/minutes for the start of the period. (The time **must** be set on the phone beforehand.)

Record until:

Using 4-digit format, enter hours/minutes for the end of the period.

Save Press the Display key.

When you switch the answering machine on, the remaining memory time is announced. If the time has not yet been set, an appropriate announcement is made (Set time → page 14). The **LO** icon appears in the display.

The phone is supplied with prerecorded announcements for the answer and record mode and for answer-only mode. If a personal announcement has not been recorded, the relevant prerecorded announcement is used.

If the message memory is full and **Activation: On** has been selected, saving is interrupted, and you will receive an instruction to delete old messages.

Recording a personal announcement/advisory message


 →  → **Announcements** → **Record Announcementt. / Record Advisory Msg.**

OK Press the Display key to start the recording.

You hear the ready tone (short tone).

- ▶ Now say your announcement (at least 3 secs.).

End Press the Display key to end the recording.

Cancel recording with  or **Back**. Restart the recording with **OK**.

Operating the answering machine on the Gigaset SL785 base station

After recording, the announcement is played back for you to check. You can rerecord the announcement with **New**.

Please note:

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the prerecorded announcement will be used again.
- ◆ If the answering machine's memory is full, it will switch to **Answer only** mode.
 - ▶ Delete old messages and the answering machine will automatically switch back to **Answer & Record** mode. Repeat recording if required.

Playing back announcements

 →  → **Announcements** → **Play Announcement / Play Advisory Message**

If you have not recorded a personal announcement, the relevant prerecorded announcement is played.

Record a new announcement while playing back the announcement:

New Press the Display key.

If the answering machine's memory is full, it will switch to **Answer only** mode.

- ▶ Delete old messages and the answering machine will automatically switch back to **Answer & Record** mode. Repeat recording if required.

Deleting announcements/advisory messages

 →  → **Announcements** → **Delete Announcemnt. / Delete Advisory Msg.**

 

Yes Press the Display key to confirm the prompt.


Once you have deleted your announcement, the relevant prerecorded announcement will be used again.

Playing back messages

The date and time of each message is logged (provided this has been set → page 14) and displayed during the playback. If caller ID is activated, the caller's number is displayed. If the caller's number is saved in the directory, the caller's name is displayed.

Playing back new messages

New messages that have not yet been played back are indicated by the  symbol in the second display line and by the  key flashing on the handset.

 Press the Message key.

Answer Machine: (Answering Machine)
Select and press **OK**.

If there are new messages, playback then begins with the first new message. After the last new message, you will hear the end tone and an announcement about how much recording time remains.

If the message has been saved with the date and time, you will hear an appropriate announcement before playback begins.

 
 
Playing back old messages

You can listen to old message if there are no more new messages. Begin playback as described under "Playing back new messages."

After the entry time and date have been played back (approx. 3 seconds), a new message assumes the status "old."

Stopping and controlling playback

 
During message playback:

 **abc** Pause playback. Press  **abc** again to resume.

Or

 
Options Open menu.

Pause Select and press **OK**.
To continue, select **Continue** and press **OK**.



Go to the start of the current message.

Press twice to go back to the previous message.



Skip to next message.

Press twice to skip to the message after next.

If playback is interrupted for over a minute, the answering machine returns to idle status.

Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

During message playback:



Press the Asterisk key.

Or:




Open menu.

Mark as New

Select and press **OK**.

An announcement informs you of the message's new status.

Playback of the current message is canceled. Playback of next message starts, if applicable.

The  key on the handset flashes.

Copying the phone number of a message to the directory

During playback or pause:



→ **Copy to Directory**

▶ Complete the entry → page 32.

Deleting messages

You can either delete all old messages together or individually.

Deleting all old messages

During playback or pause:



→ **Delete Old List**



Press the Display key to confirm the prompt.



Press the Display key to confirm the prompt.

Deleting individual old messages

During playback or pause:



Press the Display key.


Answering a call from the answering machine

You can answer a call while the answering machine is recording or being operated through remote operation:



Press the Talk or Display key.

Recording stops, and you can speak to the caller.

If 2 seconds of the call have already been recorded when you answer, the call will be displayed as a new message. The  key on the handset flashes.

You can answer the call even if it is not signaled on the handset.

Diverting an external call to the answering machine

You can divert an incoming external call to the answering machine even if it is deactivated.

Requirement: Sufficient memory space is available on the answering machine.

An external call is signaled on the handset:



Select Display key.

The answering machine immediately starts in recording mode and records the call. The set time for the call acceptance (→ page 38) is ignored.

Activating/deactivating two-way record

You can record an **external** call with the answering machine.

- ▶ Inform the caller that the call is being recorded.

Options Open menu.

Two-way Record

Select and press **OK**.

Two-way record is indicated on the display by an advisory text and is added to the Answering Machine Message list as a new message.


End Press the Display key to stop two-way record.

The maximum recording time depends on the memory available on the answering machine. If the memory is full, you will hear an end tone, the recording is aborted, and the call recorded up to that point is listed in the Answering Machine Message list as a new message.

Activating/deactivating call screening

While a message is being recorded, you can screen a call through the loudspeaker of registered handsets.

Permanently activating/deactivating call screening

 →  → Call Screening (☑ = on)

Change Select Display key to activate/deactivate the function.



Deactivating call screening for the current recording

You can switch off the function on the handset during the recording.

Silence Press the Display key.

Setting the recording parameters

The answering machine has already been preset at the factory. Use the handset to make customized settings.

 →  → Recordings

- ▶ You can enter data in the following fields:

Length:

Select maximum recording time:
1 Min., 2 Min., 3 Min. or Maximum.

Quality:

Select recording quality **Long Play**, **High** or **Excellent**. If the quality is higher, the maximum recording time is reduced.

Ring Delay:

Select when the answering machine should accept a call:
Immediately, after **10 sec.**, **18 sec.**, **30 sec.** or **Auto**.

Save Press the Display key.


 
 


 
 



 

 

Information about call acceptance

In **Auto** mode, the following applies to call acceptance:

 
- ◆ If there are no new messages, the answering machine answers a call after 18 seconds.
- ◆ If new messages are present, the answering machine answers a call after 10 seconds.



When operating remotely (→ page 39), you can tell after approx. 15 seconds that there are no new messages (otherwise the answering machine would already have accepted your call). There will be no call charges if you hang up at this point.

Changing the language for voice prompt and prerecorded announcement


-  Open the main menu.
-       
- Enter digits **and** press
-   To set English.
-   To set French.
-   To set Spanish.

 
Resetting fast access for the answering machine using key 1

By default, key  has been assigned to Fast Access to the integrated answering machine. However, if you have set the network mailbox for Fast Access (→ page 40), you can reset this setting.

 →  → **Set Key 1**

Answering Machine

Select and press .

Once you have selected the answering machine, press and **hold** key . You will be connected directly.

The setting for Fast Access applies to all registered handsets.

Operating remotely

You can check and activate your answering machine from any other telephone (hotel, pay phone, etc.).

 
Requirements:

- ◆ You have set a system PIN other than 0000 (→ page 56).
- ◆ The phone you are using for remote operation has touch-tone dialing (DTMF), meaning you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).

Calling the answering machine and playing back messages







Dial your own number.

When you hear your announcement, press , and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine with the keypad.

The following keys are used for operation:

-  To return to the start of the current message. Press twice to go back to the previous message.
-  Stop playback. Press again to resume.
-  Go to the next message.
-  Delete current message.

Activating the answering machine

- ▶ Phone home and let the phone ring until you hear: "Please enter PIN."



Enter system PIN.

Your answering machine is activated. It tells you how much memory time is left.

The messages are now played back.

The answering machine cannot be deactivated remotely.

Using the network mailbox



The network mailbox is your network provider's voice mail within the network. You cannot use the network mailbox unless you have **subscribed** to the service from your network provider.

Configuring Fast Access for the network mailbox

With Fast Access, you can dial the network mailbox or the integrated answering machine directly.

The integrated answering machine is pre-set for Fast Access. You can configure the network mailbox instead. Ask your network provider about this.

Configuring Fast Access for the network mailbox and entering the network mailbox number

 →  → Set Key 1

Network Mailbox

Select and press **Select**
(● = selected).

 




Enter the number for the network mailbox.

Save Press the Display key.

The setting for Fast Access applies to all Gigaset SL78H handsets.

Calling the network mailbox

 Press and **hold**. You are connected straight to the network mailbox.

 Press the Handsfree key , if required. You will hear the network mailbox announcement.

Viewing the network mailbox message

When a message is recorded, you receive a call from the network mailbox. If you have requested caller ID, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed Call lists, and the Message key flashes (→ page 34).

ECO DECT

You are helping to protect the environment with your Gigaset SL785.

Reduced energy consumption

Your telephone has a power-saving adapter plug and uses less power.

Reduced transmission power

The transmission power of your telephone is **automatically** reduced depending on the distance to the base station.

You can reduce the transmission power of the handset and base station even further by using Eco mode.




Eco mode: 80% transmission power reduction in standby and talk mode.

Activate/deactivate Eco mode

 → Settings → System → Eco mode

Change Press the Display key
(= on).

Status displays

Display icon	
 (flashes)	Reception strength: – Good to poor – No reception
 white	Eco mode deactivated
 green	Eco mode activated

Please note

Activating **Eco mode** reduces the range of the base station.

Setting an appointment (calendar)

You can use your handset to remind yourself of up to thirty appointments. Anniversaries entered in the directory (→ page 32) are automatically recorded in the calendar.


You can select whether the graphical calendar should be displayed in idle status. To do this, select

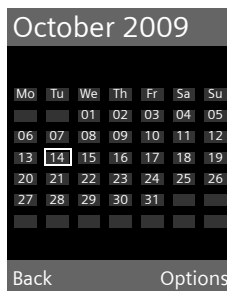
Calendar → **Options** → **Show Cal. in Idle**
(= display)

Press **Change** to activate/deactivate the function (= on).



Saving an appointment

Requirement: The date and time have already been set (→ page 14).


 → 



- ◆ Today's date is selected (bordered in orange).
- ◆ Days on which appointments have already been saved are highlighted in orange.

 /  Select the desired day in the graphical calendar.

The selected date is bordered in orange. Today's date is bordered in white.

 Press the middle of the Control key.

Setting an appointment (calendar)

- ◆ If appointments have already been entered, this will open the list of existing appointments on that day. Select **<New Entry>** → **OK** to open the data input window.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.
- ▶ You can enter data in the following fields:

Appointment:

Select **On** or **Off**.

Date:

Enter month/day/year in 8-digit format.

Time:

Enter hours/minutes in 4-digit format.

Text:

Enter text (max. 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

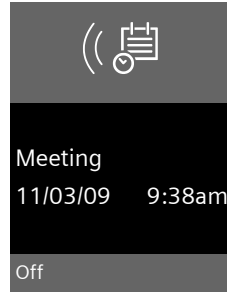
Save Press the Display key.

Please note

If you have already saved thirty appointments, you will have to first delete an existing appointment before adding a new one.

Signaling appointments and anniversaries

In idle status, an appointment reminder is signaled with the selected ringer (→ page 52) and will sound for 60 seconds. For anniversaries, the name is displayed; for appointments, the entered text is displayed, along with the date and time.



You can deactivate an appointment reminder:




Off Press the Display key to deactivate the appointment reminder.


Please note

During a call, the appointment reminder is signaled by a short tone.

Managing appointments

Editing individual appointments

  Select a day in the graphical calendar and press the Control key . (Days on which appointments have already been saved are highlighted in orange in the calendar).

 Select appointment for the day.

You have the following options:

View Press the Display key and change or confirm the entry.

Or:

Options Open the menu for editing, deleting and activating/deactivating.

Deleting all appointments from the calendar


Options → **Delete All** → **OK**


Respond to the security prompt with **Yes**. All appointments are deleted.



Displaying missed appointments, anniversaries

Missed appointments/anniversaries (→ page 32) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signaled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.

The symbol  and the number of **new** entries are shown in the display. The most recent entry is at the top of the list.

Open the list by selecting the **Message key**  (→ page 34) or using the menu:

 →  → **Missed Alarms**

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name, and a missed anniversary is displayed with the last name and first name. The date and time will also be shown.

 
Delete Delete appointment

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Setting the alarm clock

Requirement: The date and time have already been set (→ page 14).

Activating/deactivating the alarm clock and setting the wake-up time



- ▶ You can enter data in the following fields:

Activation:

Select **On** or **Off**.

Time:

Enter the wake-up time in 4-digit format. Press the Display key am/pm to change the **am/pm** setting. The default setting is am.

Occurrence:

Select **Daily** or **Monday-Friday**.


Volume:

Set the volume (1–6).

Melody:

Select melody.

Save Press the Display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signaled on the display and with the selected ringer (→ page 2). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five-minute intervals and then turned off.

During a call, the wake-up call is only signaled by a short tone.

Deactivating the wake-up call/repeat after a pause (snooze mode)

Requirement: A wake-up call is sounding.

OFF Press the Display key. The wake-up call is deactivated.

Or

Snooze Press the Display key or any other key. The wake-up call is deactivated and then repeated

Using several handsets

after 5 minutes. After the second repetition, the wake-up call is deactivated completely.

Using several handsets

Registering handsets

You can register up to six handsets to your base station.

A Gigaset SL78H handset can be registered on up to four base stations.

Manually registering the Gigaset SL78H to the Gigaset SL785

You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number is shown on the display (e.g., INT 1). If not, repeat the procedure.


On the handset


The handset must not be registered to a base station.

Register Press the Display key.

The handset is already registered to a base station:

 →  → **Registration**
→ **Register Handset**

 Select base station, (e.g., **Base 3**) and press **OK**.

 Upon prompt, enter the system PIN for the base station and press **OK**. Default system PIN is 0000.

A message displays indicating that a search is in progress for a base station ready for registration.

On the base station

Within 60 seconds, press and **hold** the Registration/Paging key on the base station (→ page 1) (approx. 3 seconds).

Registering other handsets

You can register other Gigaset handsets and handsets of other devices with GAP (Generic Access Profile) functionality as follows:

On the handset

▶ Start to register the handset as described in its user guide.


On the base station


Press and **hold** the Registration/Paging key on the base station (→ page 1) (approx. 3 sec.).

Deregistering handsets

You can deregister any other registered handset from any registered Gigaset SL78H handset.

 →  → **Registration**
→ **De-register Handset**

 Select the handset you wish to deregister and press **OK**. (The handset you are currently using is highlighted with <).)

 Enter the current system PIN and press **Save**.


Yes Press the Display key.

Locating a handset ("paging")

You can locate your handset using the base station.




- ▶ **Briefly** press the Registration/Paging key on the base station (→ page 1).
- ▶ All handsets will ring simultaneously ("paging"), even if the ringers are deactivated.

Ending paging

- ▶ **Briefly** press the Registration/Paging key on the base station or press the End Call key  on the handset.

Changing the base station



If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (**Best Base**).

-  →  → **Registration** → **Select Base**
-  Select one of the registered base stations or **Best Base**, and press **Select**.




Making internal calls

Internal calls to other handsets registered to the same base station are free of charge.


 
Calling a specific handset

 
-  Initiate internal call.
-  Enter the number of the handset.

Or:

-  Initiate internal call.
-  Select handset.
-  Press the Talk key.

 
Calling all handsets ("group call")

-  Initiate internal call.
 -  Press the Asterisk key.
- Or

- Call All** Select menu option and
-  Press the Talk key.



All handsets are called.

Ending a call

-  Press the End Call key.

 
Transferring a call to another handset

You can transfer an external call to another handset (connect).

-  Open the list of handsets. The external party hears hold music if activated (→ page 56).
-  Select a handset or **Call All** and press **OK**.

 
When the internal party answers:

- ▶ If necessary announce the external call.

-  Press the End Call key.

The external call is transferred to the other handset.

If the internal party does **not** answer or the line is busy, press the Display key **End** to return to the external call.



When transferring a call, you can also press the End Call key  before the internal party answers.

Then, if the internal party does not answer or the line is busy, the call will automatically return to you.


Internal consultation/conference calls

When you are conducting an **external** call, you can call an **internal** party at the same time for consultation, or hold a conference call between all 3 parties.


You are conducting an **external** call:

-  Open the list of handsets. The external party hears hold music if activated (→ page 56).
-  Select handset and press **OK**. You are connected to the internal party.

Either:


-  Press the Display key. You are reconnected with the external subscriber.

 
Or:

-  Press the Display key. All 3 parties are connected to each other.

Using several handsets

Ending a conference call

 Press the End Call key.

If an **internal** party presses the End Call key , the other handset remains connected to the external party.

Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if caller ID is enabled.

Ending an internal call, accepting an external call

Accept Press the Display key.

The internal call is **ended**. You are connected to the external caller.

Rejecting the external call

Reject Press the Display key.

The call waiting tone is turned off. You remain connected to the internal participant. The ringer can still be heard on other registered handsets.

Listening in to an external call

Requirement: The **Listening In** function must be activated.

You are conducting an external call. An internal party can listen in on this call and take part in the conversation. All the participants are made aware of the "listening in" by a signal tone.

 
Activating/deactivating listening in

 →  → **Telephony** → **Listening In**

Press **Change** to activate/deactivate the function (= on).


Internal listening in

The line is busy with an external call. Your screen will display information to that effect. You want to listen in to the external call.

 
 Press and **hold** the Talk key.

You can listen in to the call. All parties hear a signal tone. During this time, this handset displays the **Conference** message, and it is not possible to dial another number from this handset.

Ending listening in


 Press the End Call key.

All parties hear a signal tone.

If the **first** internal party presses the End Call key , the handset that has "listened in" remains connected to the external party.

Changing the name of a handset


The names "INT 1", "INT 2," and so on, are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.

 Open the list of handsets. Your own handset is indicated by ◀.

 Select handset.

Options Open menu.


Rename

 Enter name.

Save Press the Display key.

Changing a handset's internal number

A handset is **automatically** assigned the lowest free number when it is registered. If all slots are occupied, number 6 is overwritten if the handset is in idle status. You can change the internal number of all registered handsets (1–6).

 Open the list of handsets. Your own handset is indicated by ◀.

Options Open menu.

Assign Handset No.

Select and press **OK**.



Select number. Only numbers that have not been assigned are displayed.



Press the Display key to save the input.

Using a handset as a room monitor

When the room monitor function is activated and the handset detects a specific noise level, the handset automatically calls a destination phone number. That phone number can be either another handset or an external number.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). When the room monitor is activated, all keys are locked except the End Call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringer** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off. When the room monitor function is activated, all of the handset keys are deactivated except for the Display keys.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the room monitor remains activated.

Warning!

- ◆ **Always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are forwarding the room monitor to an outside number.**
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charging cradle.
- ◆ Ideally, the handset should be positioned 1 to 2 meters (3 to 6 feet) away from the baby. The microphone must be directed toward the baby.
- ◆ The connection to which the room monitor is forwarded must not be blocked by an activated voice mail.

Activating the room monitor and entering the destination number



→ ☆ → Room Monitor

- ▶ You can enter data in the following fields:

Activation:

Select **On** to activate.

Alarm to:

Select **Internal** or **External**.

External number: Select the number from the directory (press Display key) or enter it directly.

Internal number: Select Display key **Change** → Select handset or **Call All** if you want to call all registered handsets → **OK**.

In idle status, the destination number or the internal destination number is displayed.

Sensitivity:

Select noise level sensitivity (**Low** or **High**).

- ▶ Press **Save** to save the settings.

Using Bluetooth devices

When the room monitor function is activated, the idle display appears as shown below:



Changing the set destination number

→ → Room Monitor

- ▶ Enter and save number as described in "Activating the room monitor and entering the destination number" (→ page 47).

Cancel/deactivate room monitor

Press the End Call key to cancel the call when the **room monitor is activated**.

In the idle status, press the Display key **OFF** to deactivate the room monitor mode.

Deactivating room monitor calls remotely

Requirements: The phone must support touch-tone dialing and the room monitor should be set for an external destination number.

- ▶ Accept a call at the handset acting as the room monitor and press keys **#**.

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g., no ringer) on the handset will remain activated until you press the Display key **OFF** on the handset.

To reactivate the room monitor function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 47).

Using Bluetooth devices

Your Gigaset SL78H handset can communicate wirelessly with other devices using Bluetooth™ technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset.

You can register one Bluetooth headset to the handset. You can also register up to 5 data devices (PC, PDA) to send and receive directory entries as vCards or exchange data with the computer (→ page 61).

To use the phone numbers, dialing codes (country and area code) must be stored in the directory (→ page 55).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.


Please note

- ◆ On your handset, you can operate headsets that have the **headset** or **handsfree profile**. If both profiles are available, the handsfree profile will be used to communicate.
- ◆ It can take up to 5 seconds to create a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset or transferred to the headset, and when a number is dialed from the headset.

Activating/deactivating Bluetooth mode

 →  → Activation

Press **Change** to activate or deactivate Bluetooth mode (= activated).



In idle status, the  icon on the handset shows that Bluetooth mode is activated (→ page 2).

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 33 feet (10 m).

Please note

- ◆ If you register a headset, any headset that is already registered will be overwritten.
- ◆ If you would like to use a headset with a handset that is already registered to another device (e.g., to a mobile phone), please **deactivate** the connection before you start the registration process.

 →  → Search for Headset / Search for DataDevice

The search can take up to 30 seconds.

Once the device has been found, its name will be shown on the display.

Options Press the Display key.

Trust Device Select and press **OK**.



Enter the PIN for the Bluetooth device you want to **register** and press **OK**.

Please note

- ◆ Enter a PIN of your choice for the **data device**. Then confirm the PIN on the data device.
- ◆ For a **headset**, enter the default PIN (usually: 0000). You can find information on this in the manufacturer's user guide for your headset.

The device is saved in the list of known devices.

Canceling/repeating current search

To cancel search:

Cancel Press the Display key.

To repeat the current search, if necessary:

Options Press the Display key.

Repeat Search



Select and press **OK**.


Editing the list of known (trusted) devices

Open list

 →  → Known Devices

A corresponding icon appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

If a device is connected, the corresponding symbol  is shown in the header of the display.

Viewing entries

Open list →  (select entry)

Options Press the Display key.

View Entry Select and press **OK**.
Device name and address are displayed.
Back with **OK**.

Deregistering Bluetooth devices

Open list →  (select entry)

Options Press the Display key.

Delete Entry Select and press **OK**.

Please note

If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device."

Handset settings

Changing the name of a Bluetooth device

Open list →  (select entry)

Options Press the Display key.

Edit Name Select and press **OK**.



Change the name.

Save Press the Display key

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect to the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

◆ Reject

Back Press the Display key.

◆ Accept



Enter the PIN for the Bluetooth device you want to **accept** and press **OK**.

If you have accepted the device, you can use it temporarily (meaning as long as it is within range or until you deactivate the handset) or save it to the list of known devices.

Once the PIN has been confirmed, save to the list of known devices:

- **Yes** Press the Display key.
- **No** Press the Display key:
Use temporarily.

Changing the Bluetooth name of the handset

You can change the name used to identify the handset on the display of another Bluetooth device.

 →  → **Own Device**

Change Press the Display key




 
 
Change the name.

Save Press the Display key

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Quickly accessing functions and numbers

You can assign a number or a function to each of the Digit keys  and  through .

The left and right Display keys have a function preselected by default. You can change the assignment (→ page 51).

The number is then dialed or the function started by simply pressing a key.

Assigning Digit keys

Requirement: You have not yet assigned a number or function to the Digit key.

▶ Press and **hold** the Digit key.

The list of possible key assignments is opened. The following can be selected:

Quick Dial / Quick list

Assign key to a number from the directory or Quick list.

The directory or Quick list is opened.

▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or Quick list, there is no effect on the assignment to the Digit/Display key.

Room Monitor

Assign menu for setting and activating the room monitor to a key (→ page 47).

Alarm Clock

Assign menu for setting and activating the alarm clock to a key (→ page 43).

Calendar

Open calendar/enter new appointment.

Bluetooth

Assign the Bluetooth menu to a key.

Redial

Displaying the Last Number Redial list.

Call Lists

Displaying the lists of incoming and outgoing calls.

INT

Internal calls (→ page 45).

Starting the function, dialing the number

Press and **hold** the Digit key while in handset idle status, or **briefly** press the Display key.

Depending on the key assignment:

- ◆ Numbers are dialed directly.
- ◆ The function menu is opened.

Changing key assignments**Display key**

- ▶ Press and **hold** the left or right Display key.

The list of possible key assignments is opened.

- ▶ Proceed as described when first assigning the Digit key (→ page 50).

Using the Display key, the selected function or name of the phone number in the directory or Quick list is displayed (abbreviated if necessary) on the bottom display line.

Digit key



- ▶ **Briefly** press the Digit key.


Change Press the Display key. The list of possible key assignments is displayed.

- ▶ Proceed as described when first assigning the key as a Quick Dial (→ page 50).

Changing the display language

You can view the display texts in different languages.

 →  → **Language**


The current language is indicated by a .

 Select language and press **Select**.

If you accidentally choose a language you do not understand:

 →  →  →  → 

 
Press keys in sequence and confirm by selecting **OK**.

 Select the correct language and press the **right Display key**.

Setting the display**Setting the screensaver**

In idle status, a picture from the Resource Directory (→ page 54) or the time can be displayed as a screensaver. This will replace the idle status display. It may conceal the calendar, date, time, and name.

The screensaver is not displayed in certain situations, for example, during a call or if the handset is deregistered.

If a screensaver is activated, the **Screensaver** menu option is marked with .

 →  → **Display** → **Screensaver**

The current setting is displayed.

- ▶ You can enter data in the following fields:

Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).

Selection:

Select screensaver **or**

View Press the Display key. The active screensaver is displayed.

Handset settings



Select screensaver and press **OK**.

Save

Press the Display key.

When the screensaver conceals the display, **briefly** press to show the idle display.

Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If it is activated, the display is permanently dimmed.

→ → **Display** → **Backlight**

The current setting is displayed.

- ▶ You can enter data in the following fields:

In Charger

Select **On** or **Off**.

Out of Charger

Select **On** or **Off**.

Please note

With the **On** setting, the standby time of the handset can be significantly reduced.

Save

Press the Display key.

Activating/deactivating auto answer

If you activate this function, you can simply answer a call by lifting the handset out of the charging cradle, without having to press the Talk key .

→ → **Telephony** → **Auto Answer**

Change

Press Display key (= on).

Changing the handsfree/earpiece volume

You can set the loudspeaker volume for handsfree talking and the earpiece volume to five different levels.

In idle status:



Open the menu for setting the **Call Volume**.



Set the earpiece volume.



Scroll to the **Speaker** line.



Set the handsfree volume.

Save

Press the Display key, if necessary, to save the setting permanently.

Setting the volume during a call:



Press the Control key.



Select volume.

The setting will automatically be saved after approx. 3 seconds; if not, press the Display key **Save**.

If is assigned to another function:

Options

Open menu.

Volume

Select and press **OK**.

Configure setting (see above).

Please note

You can also set the call volume through the menu (→ page 26).

Changing ringers

◆ Volume:

You can choose between five volumes (1–5; e.g., volume 3 =) and the "crescendo" ringer (6; volume increases with each ring =).

◆ Ringers:

You can select various ringers, melodies or any sound from the Resource Directory (→ page 54).

You can set different ringers for the following functions:

◆ **Ext. Calls:** For external calls (→ page 27)

◆ **Internal Calls:** For internal calls (→ page 45)

◆ **Appts:** For set appointments (→ page 41)


◆ **All:** The same ringer for all functions

Settings for individual functions


Set the volume and melody depending on the type of signaling required.

In idle status:

 → **Ringer Settings**

 Select setting (e.g., **Ext. Calls**) and press **OK**.

 Set volume (1–5, crescendo).

 Scroll to the next line.

 Select melody.

Save Press the Display key to save the setting.

Additionally for external calls:

Once you have selected the melody, you can specify a time period when you do not want the telephone to ring (e.g., during the night).

Time Control:
Select **On** or **Off**.

Suspend ringing from:

In 4-digit format, enter the start of the period.

Suspend ringing until:

In 4-digit format, enter the end of the period.

Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalized melody in the directory (VIP).

Same ringer for all functions

In idle status:

 → **Ringer Settings** → **All**

▶ Set volume and ringer (see "Settings for individual functions").

Save Press the Display key.

Yes Confirm the prompt to save your settings.

 
Please note

You can also set the call volume, ringers, and advisory tones through the menu (→ page 26).

Activating/deactivating the ringer

 
You can deactivate the ringer on your handset before you answer a call or when the handset is in idle status; the ringer can be deactivated permanently or just for the current call. The ringer cannot be reactivated while an external call is in progress.

Deactivating the ringer permanently

 Press and **hold** the Asterisk key.

The  icon appears in the display.

Reactivating the ringer

 
 Press and **hold** the Asterisk key.

Deactivating the ringer for the current call

 
Silence Press the Display key.

Activating/deactivating the alert tone

In place of the ringer, you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringer.





 Press and **hold** the Asterisk key, and **within 3 seconds:**

Beep Press the Display key. A call will now be signaled by **one** short alert tone.

The  icon appears in the display.

Using the Resource Directory

The Resource Directory on the handset manages sounds, which you can use as ringers, and pictures (CID pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling Line Identification (CID). The Resource Directory can manage the following media types:



Icon	Sound	Format
	Ringers	Standard
	Monophonic	Standard
	Polyphonic	.mid
	Imported sounds	Standard/.mid
	Picture – CID picture – Screensaver	BMP 240 x 130 pixels 240 x 320 pixels

The icon is displayed in front of the name in the Resource Directory. Various mono- and polyphonic sounds and pictures are preconfigured on your handset.


You can listen to the available sounds and view the pictures.

You can download pictures and sounds from a PC (→ page 61). If you do not have enough memory available, you must first delete one or more pictures. You cannot rename or delete pictures marked with the  icon.

Viewing pictures/playing back sounds


 →  → Screensavers / Caller Pictures / Sounds (select entry)

Pictures:


View Press the Display key. The selected picture is displayed. Use the  key to scroll between the pictures.

If you have saved a picture in an invalid data format, you will see an error message after selecting the entry.

Sounds:

The selected sound is played back immediately. Use the  key to scroll between the sounds.

 
You can set the volume during playback:

- Volume** Press the Display key.
-  Set volume.
- Save** Press the Display key.

Renaming/deleting a picture/sound

You have selected an entry.

Options Open menu.

If a picture cannot be deleted () , these options are not available. You can select the following functions:

Delete Entry



The selected entry is deleted.

Edit Name

Change the name (max. 16 characters) and press **Save**. The entry is stored with the new name.

Check remaining memory

View the amount of memory remaining for pictures and sounds.

 →  → Capacity

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key click:** Every key press is confirmed.
- ◆ **Acknowledgment tones:**
 - **Confirmation tone** (ascending tone sequence): At the end of an entry/setting and when a new entry arrives in the Answering Machine Message list or Call lists
 - **Error tone** (descending tone sequence): When you make an incorrect entry
 - **Menu end tone:** When scrolling to the end of a menu
- ◆ **Battery low beep:** The battery requires charging.

In idle status:

 → **Advisory Tones**

- ▶ You can enter data in the following fields:

Key Tones:


Select **On** or **Off**.

Confirmation:

Select **On** or **Off**.

Battery:

Select **On**, **Off** or **In Call**. The battery warning tone is activated/deactivated and only sounds during a call.

 Press the Display key.

Please note

You can also set the call volume, ringers, and advisory tones through the menu (→ page 26).

Setting long-distance and area codes

To transfer phone numbers (e.g., in vCards), it is essential that your area code (international and local area code) is saved on the phone.


Some of these numbers are already pre-set.


 →  → **Telephony** → **Area Codes**


Check that the (pre)set area code is correct.


- ▶ You can enter data in the following fields:

 Select/change input field.

 Navigate in the input field.

 If necessary, delete number: press the Display key.

 Enter number.

 Press the Display key.

Example:

Area Codes	
International code:	011- 1
Local area code:	1-972
 	

Please note



If a long distance number is recorded on your mobile phone without the national access code "1" (i. e., 312 - 555-1212 instead of 1-312-555-1212), please add the "1" in front of the telephone number before transferring the number to the phonebook of the SL78H handset via Bluetooth.

Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset

- ◆ Registration to the base station
- ◆ Date and time
- ◆ Entries in the calendar
- ◆ Entries in the directory, Quick list, Call lists as well as the content of the Resource Directory

 →  → **Reset** → **Handset Reset**
Yes Press the Display key.

Base station settings

The base station settings are carried out using a registered Gigaset SL78H handset.





Protecting against unauthorized access

Protect the system settings of the base station with a PIN known only to you. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base station or when restoring the default settings.

Changing the system PIN

You can change the 4-digit system PIN preset on the base station (default setting: 0000) to a 4-digit PIN known only by you.

Setting a system PIN facilitates remote operation of the answering machine (→ page 39).

 →  → **System** → **System PIN**
 Enter the current system PIN and press **OK**.
 Enter your new system PIN and press **OK**.

Returning to the default system PIN

If you have forgotten your system PIN, you can reset the base station to the original code 000.

Disconnect the power cord from the base station. Hold down the Registration/Paging key on the base station while reconnecting the power cable to the base station. Release the key after a few seconds.

The base station has now been reset, and the system PIN 0000 set.

Please note

All handsets are deregistered and must be reregistered. All handsets are deregistered and must be re-registered. All factory settings are restored.

Activating/deactivating music on hold

 →  → **Audio Settings**
→ **Music on Hold**


Press **Change** to activate or deactivate the music on hold (= on).

Restoring the base station to the factory settings

When the settings are restored

- ◆ Date and time will be retained
- ◆ Eco mode is deactivated
- ◆ Handsets are still registered
- ◆ The system PIN is not reset


 →  → **Reset** → **Base Reset**

 Enter the system PIN and press **OK**.
Yes Press the Display key.

Connecting the base station to the PABX

The following settings are only necessary when your PABX requires them; see the PABX user guide.

Dialing modes and setting Flash Duration

The current setting is indicated by .

Changing the dialing mode


The following dialing modes can be selected:

- ◆ Touch-tone dialing (DTMF)
- ◆ Pulse dialing



→ **Telephony** → **Dialing Mode**



Select dialing mode and press **Select** ( = selected).


Setting Flash Duration

Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.




→ **Telephony** → **Flash Duration**



Select duration and press **Select**. ( = set value). Possible values are: 80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms, 600 ms, 800 ms.

Setting pauses

Changing pause after line seizure

You can change the length of the pause inserted between pressing the Talk key  and sending the number.



Open the main menu.



Press keys.



Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.) and press **OK**.

Changing the pause after the Flash key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).



Open the main menu.



Press keys.



Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

Switching temporarily to touch-tone dialing (DTMF)

If your PABX still operates with pulse dialing (DP), but you need touch-tone dialing (DTMF) for a connection (e.g., to listen to the network mailbox), you must switch to touch-tone dialing for the call.

Requirement: You are conducting a call or have already dialed an external number.



Press the Asterisk key.

After the call has ended, pulse dialing is automatically reactivated.

 
Questions and answers

If you have any questions about using your phone, visit us any time at www.gigaset.com/customer-care. The table below contains a list of common problems and possible solutions.

Registration or connection problems with a Bluetooth headset.

- ▶ Reset the Bluetooth headset (see the user guide for your headset).
- ▶ Delete registration data from the handset when deregistering the device (→ page 49).
- ▶ Repeat the registration process (→ page 49).

The display is blank.

1. The handset is not switched on.
 - ▶ Press and **hold** the End Call key .
2. The battery is dead.
 - ▶ Charge the battery or replace it (→ page 11).

"No Base" flashes in the display.

1. The handset is outside the range of the base station.
 - ▶ Move the handset closer to the base station.

The base station's range is reduced because Eco mode is activated.

 - ▶ Deactivate Eco mode (→ page 41), or reduce the distance between the handset and the base station.
2. The base station is not turned on.
 - ▶ Check the base station's power adapter (→ page 9).

"Please register handset" flashes in the display.

Handset has not been registered with the base station or has been deregistered.

- ▶ Register the handset (→ page 44).

Handset does not ring.

The ringer is deactivated.

- ▶ Activate the ringer (→ page 53).

You cannot hear a ringer/dial tone from the landline network.

The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.

- ▶ Always use the phone cord supplied, or ensure that the pin connections are correct when purchasing from a retailer (→ page 9).

Error tone sounds after system PIN prompt.

You have entered the wrong system PIN.

- ▶ Reset the system PIN to 0000 (→ page 56).

Forgotten the system PIN.

- ▶ Reset the system PIN to 0000 (→ page 56).

The other party cannot hear you.

You have pressed the **Mute** Display key. The handset is muted.

- ▶ Activate the microphone again (→ page 28).

The number of the caller is not displayed despite CID.

Caller ID is not enabled.

- ▶ **The caller** should ask the network provider to release Caller ID (CID).

You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

- ▶ Repeat the operation. Watch the display and refer to the user guide, if necessary.

You cannot listen to messages on the network mailbox.

Your PABX is set for pulse dialing.

- ▶ Set your PABX to touch-tone dialing.

No time is specified for a message in the Call lists.

Date and time have not been set.

- ▶ Set the date/time (→ page 14).

The answering machine announces "PIN is incorrect" during remote operation.

1. You have entered the wrong system PIN.
 - ▶ Enter the system PIN again.
2. The system PIN is still set to 0000.
 - ▶ Change the system PIN (→ page 56).

The answering machine is not recording any messages/has switched to answer only.

Its memory is full.

- ▶ Delete old messages.
- ▶ Play back new messages and delete.

Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colors may vary.

This is completely normal and does not indicate an error.

Protecting our environment

Our environmental mission statement

At Gigaset Communications GmbH, we take our social responsibilities very seriously and are actively committed to improving the world we live in. Our ideas, technologies, and actions serve people, society, and the environment. The goal of our activities around the world is to secure sustainable life resources for humanity. Throughout the entire life cycle of each of our products, we are committed to taking a responsible environmental approach. We assess the environmental impact of our products, including their manufacture, procurement, distribution, use, service, and disposal, as early as the product and process design stages.

Further information on our environmentally friendly products and processes is available on the Internet at www.qigaset.com.

Environmental management system



Gigaset Communications GmbH is certified compliant with the EN 14001 and ISO 9001 international standards.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since February 17, 1994, by TÜV SÜD Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 41) saves energy and actively contributes to environmental protection.

Disposal

Batteries should not be disposed of in general household waste. Observe local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic equipment should be disposed of separately from general household waste, using the sites designated by local authorities.



The appropriate disposal and separate collection of used equipment prevents potential harm to health and the environment.

For further information on disposing of your used equipment, please contact your local authorities, or your waste collection service.

Appendix

Caring for your phone

Wipe the base station, charging cradle, and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset should come into contact with liquid:

1. **Immediately switch the handset off and remove the batteries.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset, with the battery compartment open and the keypad facing down, in a dry, warm place **for at least 72 hours** (**never** in a microwave oven, convection oven, etc.).
4. **Do not switch on the handset again until it is completely dry.**

Once fully dried, you should be able to use it again normally.

Specifications

Recommended batteries

Technology: Lithium ion (Li-ion)

Voltage: 3.7 V

Capacity: 830 mAh

Type: V30145-K1310-X444

The handset is supplied with the recommended battery. Only the original battery may be used.

In light of continuous advances in battery technology, we regularly update the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages:

www.gigaset.com/customer-care

Handset operating and charging times

The operating time of your phone depends on the capacity and age of the battery as well as the way you use the device. (All times are maximum possible times and apply when the display back-light is switched off).

Standby time	approx. 200 hours (8 days)
Talktime	approx. 15 hours
Charging time	approx. 3.5 hours

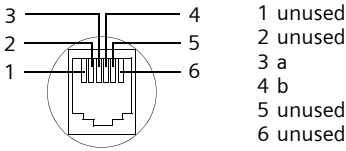
Base station power consumption

In standby mode	approx. 1.3 W
During a call	approx. 1.5 W

General specifications

DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10-ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	120 V ~/60 Hz
Environmental operating conditions	+5°C to +45°C, 20% to 75% relative humidity
Dialing mode	DTMF (touch-tone dialing)/DP (pulse dialing)

Pin connections on the telephone jack



Writing and editing text

The following rules apply when writing text:

- ◆ Control the cursor with .
- ◆ Characters are inserted to the left of the cursor.
- ◆ Press the Asterisk key to show the table of special characters. Select the required character, then press the Display key to insert the character at the cursor position.
- ◆ The first letter of the name of directory entries is automatically capitalized, followed by lowercase letters.

Writing names

Press the relevant key several times to enter the corresponding letters/characters.

If you press and **hold** a key, the corresponding digit will be inserted.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
			1							
	a	b	c	2	ä	á	à	â	ã	ç
	d	e	f	3	ë	é	è	ê		
	g	h	i	4	ï	í	ì	î		
	j	k	l	5						
	m	n	o	6	ö	ñ	ó	ò	ô	õ
	p	q	r	s	7	ß				
	t	u	v	8	ü	ú	ù	û		
	w	x	y	z	9	ÿ	ý	æ	ø	å
	.	,	?	!	0					

- 1) Space
- 2) Line break

Setting uppercase/lowercase or digits

Press the Pound key briefly to switch from Abc to 123 mode, from 123 to abc mode, and from abc to Abc mode (uppercase: 1st letter uppercase, all others lowercase). Press the Pound key before entering the letter.

You can see on the display whether uppercase letters, lowercase letters, or digits is selected.

Additional functions in the PC interface

You can connect your handset to your computer using Bluetooth (→ page 48) or the supplied USB cable. If you want to use the Bluetooth connection, your computer must be equipped with an suitable driver. To transfer data using the USB port, you must install the driver software from the supplied CD before connecting the USB cable (→ page 17).

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download at www.qigaset.com/qigasetSL780).

Please note

- ◆ No Bluetooth connection can be established if the USB cable is plugged in.
- ◆ If Bluetooth is activated and the supplied USB data cable is inserted in the connection socket, Bluetooth is automatically deactivated.

To install the USB Driver:

Insert the supplied CD into the CD-ROM drive. If the program doesn't load automatically, start the Setup_Gigaset_QuickSync.exe program manually. At the prompt, select the appropriate language, then follow any additional on-screen instructions. When the installation is complete, click **Finish**.

Transferring data

You can

- ◆ Synchronize the directory on your handset with Outlook.
- ◆ Upload CID pictures (.bmp) from the computer to the handset.
- ◆ Upload pictures (.bmp) for the screen-saver from the computer to the handset.
- ◆ Upload sounds (ringer melodies) from the computer to the handset.

During the transfer of data between handset and PC, you will see **Data transfer in progress** on the display. During this time, the keypad is disabled, and incoming calls will be ignored.

Updating the firmware



- ▶ Connect your phone to your PC using the **USB cable** supplied (→ page 17).
- ▶ Start the **Gigaset QuickSync** program on your PC.
- ▶ Establish a connection to your handset.
- ▶ Select **[Settings]** → **[Device Properties]** to open the **[Device]** tab

- ▶ Click **[Firmware Update]**

This launches the firmware update.

The data is initially loaded from the update server over the Internet.

The amount of time this takes depends on the speed of your Internet connection.

 

 

The display on your phone is switched off, and the Message key  and Handsfree key  start flashing.

The update process can take up to 10 minutes (not including the download time).

Do not interrupt the process or remove the USB cable. Once the update is complete, your phone will automatically restart.

Procedure in case of an error

If your phone does not work properly following the update, repeat the update process. If you cannot establish a connection to the PC, proceed as follows:

- ▶ Remove the USB cable from the telephone
- ▶ Remove the battery (→ page 12)
- ▶ Press and hold keys  and  simultaneously
- ▶ Replace the battery
- ▶ Reconnect the USB cable
- ▶ Release keys  and  simultaneously

Proceed as described under "**Updating the firmware**".

Bluetooth Qualified Design Identity

The Bluetooth QD ID for your Gigaset SL78H is: B013322.

Industry Canada Certification

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together.

This precaution may be particularly important in rural areas

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC / ACTA Information

Warning: Changes or modifications to this unit not expressly approved by Gigaset Communications USA LLC could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address: www.gigaset.com/docs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at 1-866-247-8758. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the base station and receiver.
3. Connect the base station into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio TV technician for help.

Notice for Direct Inward Dialing ("DID")

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION IS A VIOLATION OF PART 68 OF THE FCC'S RULES.

Notice to Hearing Aid Wearers:

This phone system is compatible with inductively coupled hearing aids.

Power Outage:

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Notice:

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested and meets FCC RF exposure guidelines. Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Notice to telephone company service:

If you need service from your telephone company, please provide them with the information

- Facility interface Code (FIC)
- Service Order Code (SOC)
- Universal Service Order Code (USOC)

as indicated on the label on the bottom side of the base station.

Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
5. Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a.) When the power cord is damaged or frayed.
- b.) If liquid has been spilled into the product.
- c.) If the product has been exposed to rain or water.
- d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
- e.) If the product has been dropped or physically has been damaged.
- f.) If the product exhibits a distinct change in performance.

13. Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrestor.

14. Do not use the telephone to report a gas leak in the vicinity of the leak.

15. Emergency/911 numbers may not be dialed if the keypad is locked.

16. Minimum No. 26 AWG telecommunication line cord must be used with this phone.

BATTERY SAFETY PRECAUTIONS

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this product.
2. DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.
3. Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
5. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.

Service (Customer Care)

6. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.

7. Periodically clean the charge contacts on both the charger and handset.

Service (Customer Care)

Customer Care Warranty for Cordless Products
To obtain Customer Care Warranty service,
product operation information, or for problem resolution, call:
Toll Free: 1-866-247-8758

End-user limited warranty

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: 1-866-247-8758.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC or Gigaset Communications Canada Inc. (collectively "Gigaset NAM"). Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

2. EXCLUSIVE REMEDY

Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING:

- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.
- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed.
- Cost of installation, removal or reinstallation.
- Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
- Equipment and components not manufactured, supplied or authorized by Gigaset NAM.
- Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness,

floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.

- Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
- Signal reception problems (unless caused by defect in material or workmanship in the Product).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM.
- Consumables (such as batteries and fuses).
- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset NAM.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (i.e., the United States of America or Canada respectively, but not both).

USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET NAM OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET NAM MAY VOID WARRANTY.

4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Support service will be provided for you by accessing the toll free customer service number:

1-866-247-8758

5. LIMITATION OF WARRANTY

Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, **YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES**, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

7. DISCLAIMER OF WARRANTIES

GIGASET NAM AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NON-INFRINGEMENT WITH REGARD TO THE PRODUCT. Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL GIGASET NAM, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET NAM OR SELLER OR ANY SUPPLIER, AND EVEN IF GIGASET NAM OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET NAM, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET NAM OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Gigaset Service or for Support on your Gigaset phone, visit our web site at <http://www.gigaset.com> or please call **1-866-247-8758**.

Issued by
Gigaset Communications GmbH
Schlavenhorst 66, D-46395 Bocholt
Gigaset Communications GmbH is a licensee of the Siemens trademark.

© Gigaset Communications GmbH 2009

All rights reserved.

Subject to availability. Rights of modifications reserved.

Product attributes subject to change.

We reserve the right, to make changes without notice in equipment design and/or components.

Part Number: A31008-M2009-R301-2-6019

© Copyright 2009.

Accessories

Gigaset SL78H handset

- ◆ Illuminated graphical color display (256k colors)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringers
- ◆ Directory for approximately 500 entries
- ◆ Picture CID
- ◆ PC interface (e.g., for managing directory entries, ringers, and screensavers)
- ◆ Bluetooth
- ◆ Room monitor

www.gigaset.com/gigasetSL78H



Gigaset S67H handset

- ◆ Illuminated graphical color display (65k colors)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringers
- ◆ Directory for approximately 250 entries
- ◆ Picture CID
- ◆ Headset socket
- ◆ Room monitor

www.gigaset.com/gigasetS67H



Accessories

Gigaset SL37H handset

- ◆ Illuminated graphical color display (65k colors)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ringers
- ◆ Directory for approximately 250 entries
- ◆ Picture CID
- ◆ PC interface (e.g., for managing directory entries, ringers, and screensavers)
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor
- ◆ Walkie-talkie function

www.gigaset.com/gigasetSL37H

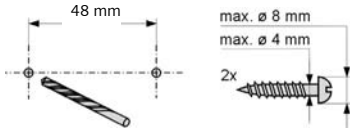


All accessories, with the exception of batteries, are available from your phone retailer.



Use only original accessories. This prevents possible health risks and property damage and also ensures compliance with all relevant regulations.

Mounting the base station to the wall



Please note

Mounting screws are not included in the package.

Index

A

Access protection	56
Accessories	70
Acknowledgment tones	55
Activating	
advisory tones	55
answering machine	35
answering machine (remote operation)	39
appointment	41
call acceptance	52
handset	22
internal listening in	46
keypad lock	22
room monitor	47
two-way record	38
Advisory tones	55
Alarm clock	43
Alert tone	53
Anniversary	32
deactivating	32
missed	43
saving in directory	32
Announcement (answering machine)	36
Answer only mode (answering machine)	35
Answering machine	35
activating/deactivating	35
deleting messages	37
Message list	34
message list	33
playing back messages	36
recording a personal announcement/ answer only	35
remote operation	39
scrolling back	36
scrolling forward	36
Answering machine, see also Network mailbox	
Appointment	41
Appointment/anniversary display missed	43
Appointments	
activating/deactivating	42
deleting	42
managing	42

Area codes	
extra codes	16
local area code	16
setting own area code	55
Assigning a key	50
Assigning a number key	50
Asterisk key	1
Automatic	
call acceptance	27, 52

B

Base station	
changing	45
connecting	9
connecting to PABX	57
power consumption	60
restoring factory settings	56
setting	56
setting up	10
system PIN	56
Battery	
charging	1, 2, 13
display	1, 2
icon	1, 2, 16
inserting	11
recommended batteries	60
tone	55
Best base station	45
Birthday, see Anniversary	
Bluetooth	
accepting a call	27
activate	49
changing device name	50
deregistering devices	49
list of known devices	49
registering devices	49
setting own area code	55
transferring directory (vCard)	31

C

Calendar	41
Call	
accepting	27
accepting (Bluetooth)	27
diverting (connecting)	45
ending	27
external	27
internal	45
party listening in	46
picking up from answering machine	37

Index

transferring (connecting)	46
two-way record	38
Call acceptance	38, 52
Call duration	27
Call lists	33
Call screening during recording	38
Call waiting	
internal call	46
Caller ID	28
Calling	
external	27
internal	45
Care of the telephone	60
Changing	
destination number	48
device name (Bluetooth)	50
dialing mode	57
display language	51
earpiece volume	52
handsfree volume	52
internal number of a handset	46
name of a handset	46
pauses	57
ringer	52
system PIN	56
Character set	61
Charge status display	1, 2
CID picture	28, 30, 54
Conference (internal)	45
Confirmation tone	55
Connecting, base station to PABX	57
Consultation call (internal)	45
Control key	1, 19
Correcting incorrect entries	20
Customer Care	66

D

Deactivating	
advisory tones	55
answering machine	35
appointment	41
call acceptance	52
handset	22
internal listening in	46
keypad lock	22
room monitor	48
two-way record	38
Delete key	20

Deleting

announcement for answering	
machine	36
characters	20
message	37
Deregistering (handset)	44
Deregistering devices (Bluetooth)	49
Destination number (room monitor)	47

Dialing

directory	30
mode	57
Quick Dial	50
Quick list	30

Directory

copying number from text	32
managing entries	30
opening	19
order of entries	30
saving anniversary	32
saving entry	29
sending entry/list to handset	31
transferring a vCard (Bluetooth)	31
using to enter numbers	32

Display

backlight	52
changing display language	51
in idle status	21
memory (directory/Quick list)	31
memory (My stuff)	54
missed appointments/	
anniversaries	43
network mailbox message	40
number (CI/CID)	28
screensaver	51
setting	51
Display keys	1, 20
assigning	50
Disposal	59
DP (pulse dialing)	57

E

Earpiece mode	28
Earpiece volume	52
ECO DECT	41
Eco mode	41
E-mail address	
copying from the directory	32
End Call key	1, 27
Ending, call	27

- Entry
 - selecting from directory 30
- Environment 59
- Error tone 55
- External call
 - diverting to ans. mach. 37
- Extra codes 16
- F**
- Fast access
 - answering machine 39
 - network mailbox. 40
- Firmware update 62
- Flash Duration 57
- Flash key 1, 57
- G**
- General troubleshooting 58
- Group call 45
- H**
- Handset
 - activating/deactivating 22
 - advisory tones 55
 - changing internal number. 46
 - changing name 46
 - changing the number 46
 - changing to a different base
 - station. 45
 - changing to best reception 45
 - contact with liquid 60
 - deregistering 44
 - display backlight. 52
 - display language. 51
 - diverting a call 45
 - earpiece volume. 52
 - handsfree volume. 52
 - idle status 21
 - list 19
 - locating 44
 - muting. 28
 - paging 44
 - registering 44
 - registering to a different
 - base station. 45
 - restoring to factory settings. 56
 - screensaver 51
 - setting 50
 - setting up. 11
 - using room monitor 47
 - using several 44
- Handset operating time
 - in room monitor mode. 47
- Handsfree
 - key 1
 - talking. 28
- Headset (Bluetooth) 48
- Help 58
- I**
- Icon
 - alarm clock 43
 - answering machine 35, 38
 - battery 16
 - display 20
 - for new messages 34
 - keypad lock 22
 - new message 36
 - ringer 53
- Idle status (display) 21
- Idle status, returning to. 21
- Incorrect input (correction) 20
- Installing, base station 10
- Internal
 - conference 45
 - consulting 45
 - listening in 46
 - making calls 45
- Internal call. 45
- call waiting 46
- K**
- Key 1 (Fast Access) 1, 39
- Keypad lock 22
- Keys
 - Asterisk key 1
 - Control key 1, 19
 - Delete key 20
 - Display keys. 1, 20
 - End Call key. 1, 27
 - Fast Access 1, 39
 - Flash key 1
 - Handsfree key 1
 - Message key 1
 - On/Off key 1
 - Pound key 1, 22
 - Quick list key 1
 - Talk key 1, 27
- L**
- Language, display 51
- Last number redial 33

Index

List	29
Answering Machine	33
answering machine	34
Call lists	33
Handsets	19
Known Devices (Bluetooth)	49
Missed Calls	33
Network mailbox	33
Quick list	29
Listening in on a call	46
Local area code	16
Locating, handset	44
Lock	
activating/deactivating keypad lock	22
M	
Making calls	
accepting a call	27
external	27
internal	45
Manual last number redial	33
Medical appliances	6
Memory	
directory/Quick list	31
My stuff	54
Menu	
end tone	55
opening	19
overview	25
prompting	21
Message key	1
opening lists	34
Messages	35
copy the number to the	
directory	37
deleting	37
marking as "new"	37
new message icon	36
playing back	36
Microphone	1
Missed	
anniversary	43
appointment	43
calls	33
Music on hold	56
Muting handset	28
My stuff	54

N

Name of a handset	46
Network mailbox	40
Number	
as destination for room monitor	47
copying from directory	32
copying to directory	32
displaying caller's number (CID)	28
entering with directory	32
saving in the directory	29

O

On/Off key	1
Order in directory	30

P

PABX

connecting base station	57
pauses	57
setting dialing mode	57
setting Flash Duration	57
switching to touch-tone dialing	57
Package contents	8
Paging	44
Paging key	1
Pause	
after Flash key	57
after line seizure	57
PC Interface	61
Picture	
deleting	54
downloading	54
renaming	54
Picture CID	30, 54
PIN change	
system PIN	56
Pin connections	61
Playing back	
announcement (answering machine)	36
message (answering machine)	36
Pound key	1, 22
Power adapter	6
Power consumption (base station)	60
Protecting the phone against access	56
Pulse dialing	57

Q

- Questions and answers 58
- Quick Dial 29, 50
- Quick list 29
- Quick list key 1

R

- Range 10
- Recording
 - quality 38
 - time 38
 - two-way record 38
- Registering (handset) 44
- Registering devices (Bluetooth) 49
- Registration key 1
- Reminder call 32
- Remote operation 39
- Resource directory 54
- Ringer
 - changing 52
 - setting volume 52
- Room monitor 47

S

- Screensaver 51
- Searching in directory 30
- Sending
 - directory entry to handset 31
- Sensitivity (room monitor) 47
- Service (Customer Care) 66
- Setting
 - date 14, 26
 - Flash Duration 57
 - screensaver 51
 - time 14, 26
- Setting up
 - handset 11
- Signal tone, see Advisory tones
- Snooze mode 43
- Sound
 - downloading 54
- Sound, see Ringer
- Special functions 57
- Specifications 60
- System settings 56

T

- Talk key 1, 27
- Telephone jack, pin connections 61
- Touch-tone dialing 57

U

- Update 62
- USB connection 17

V

- Viewing the network mailbox
 - message 40
- VIP (directory entry) 30
- Volume
 - earpiece 52
 - earpiece volume 52
 - handset handsfree volume 52
 - loudspeaker 52
 - ringer 52
 - setting 53

W

- Warning tone, see Advisory tones
- Writing and editing text 61